


C series Installation manual



FRAME WORK

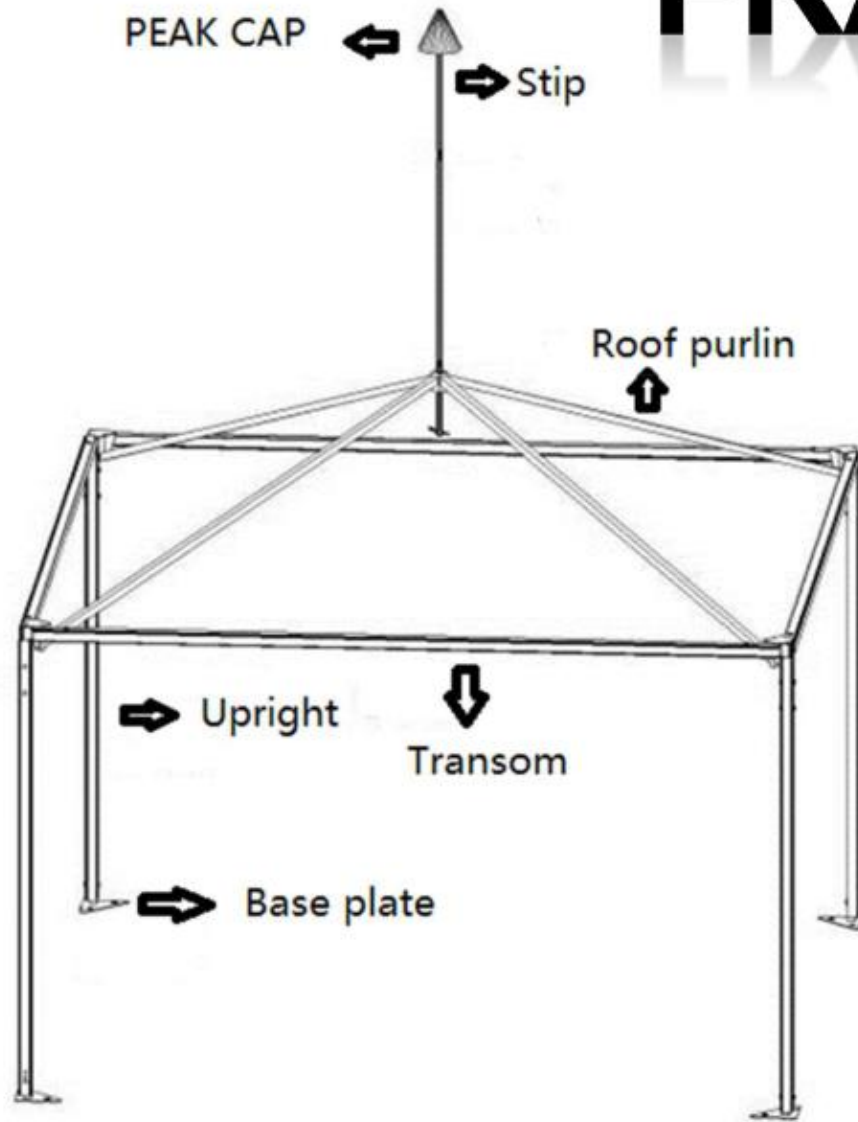


1. Install the transom






Conner connector ←

Combine Conner connector and transom

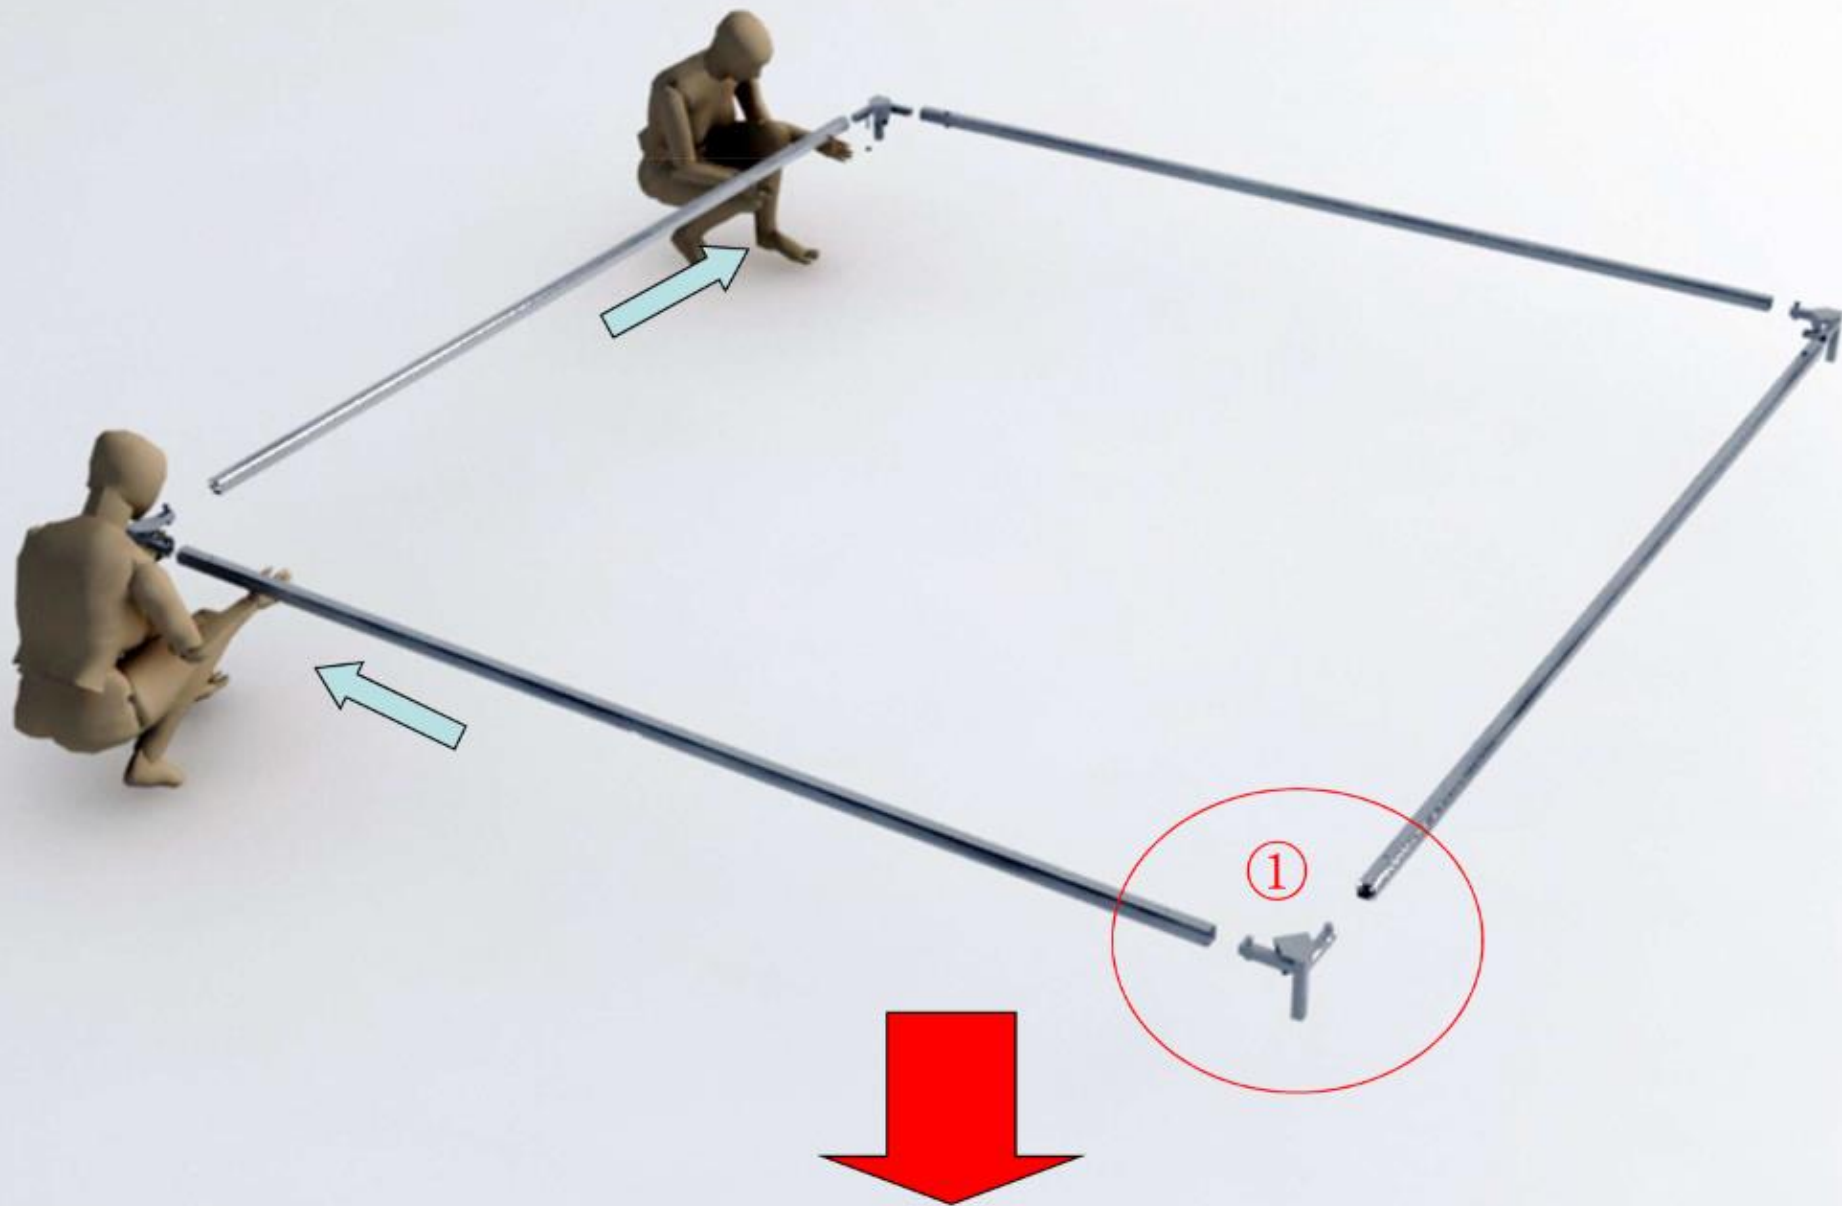

① How to install

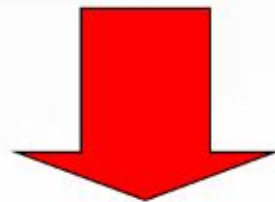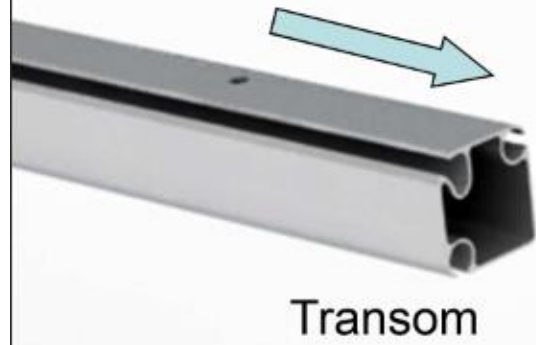

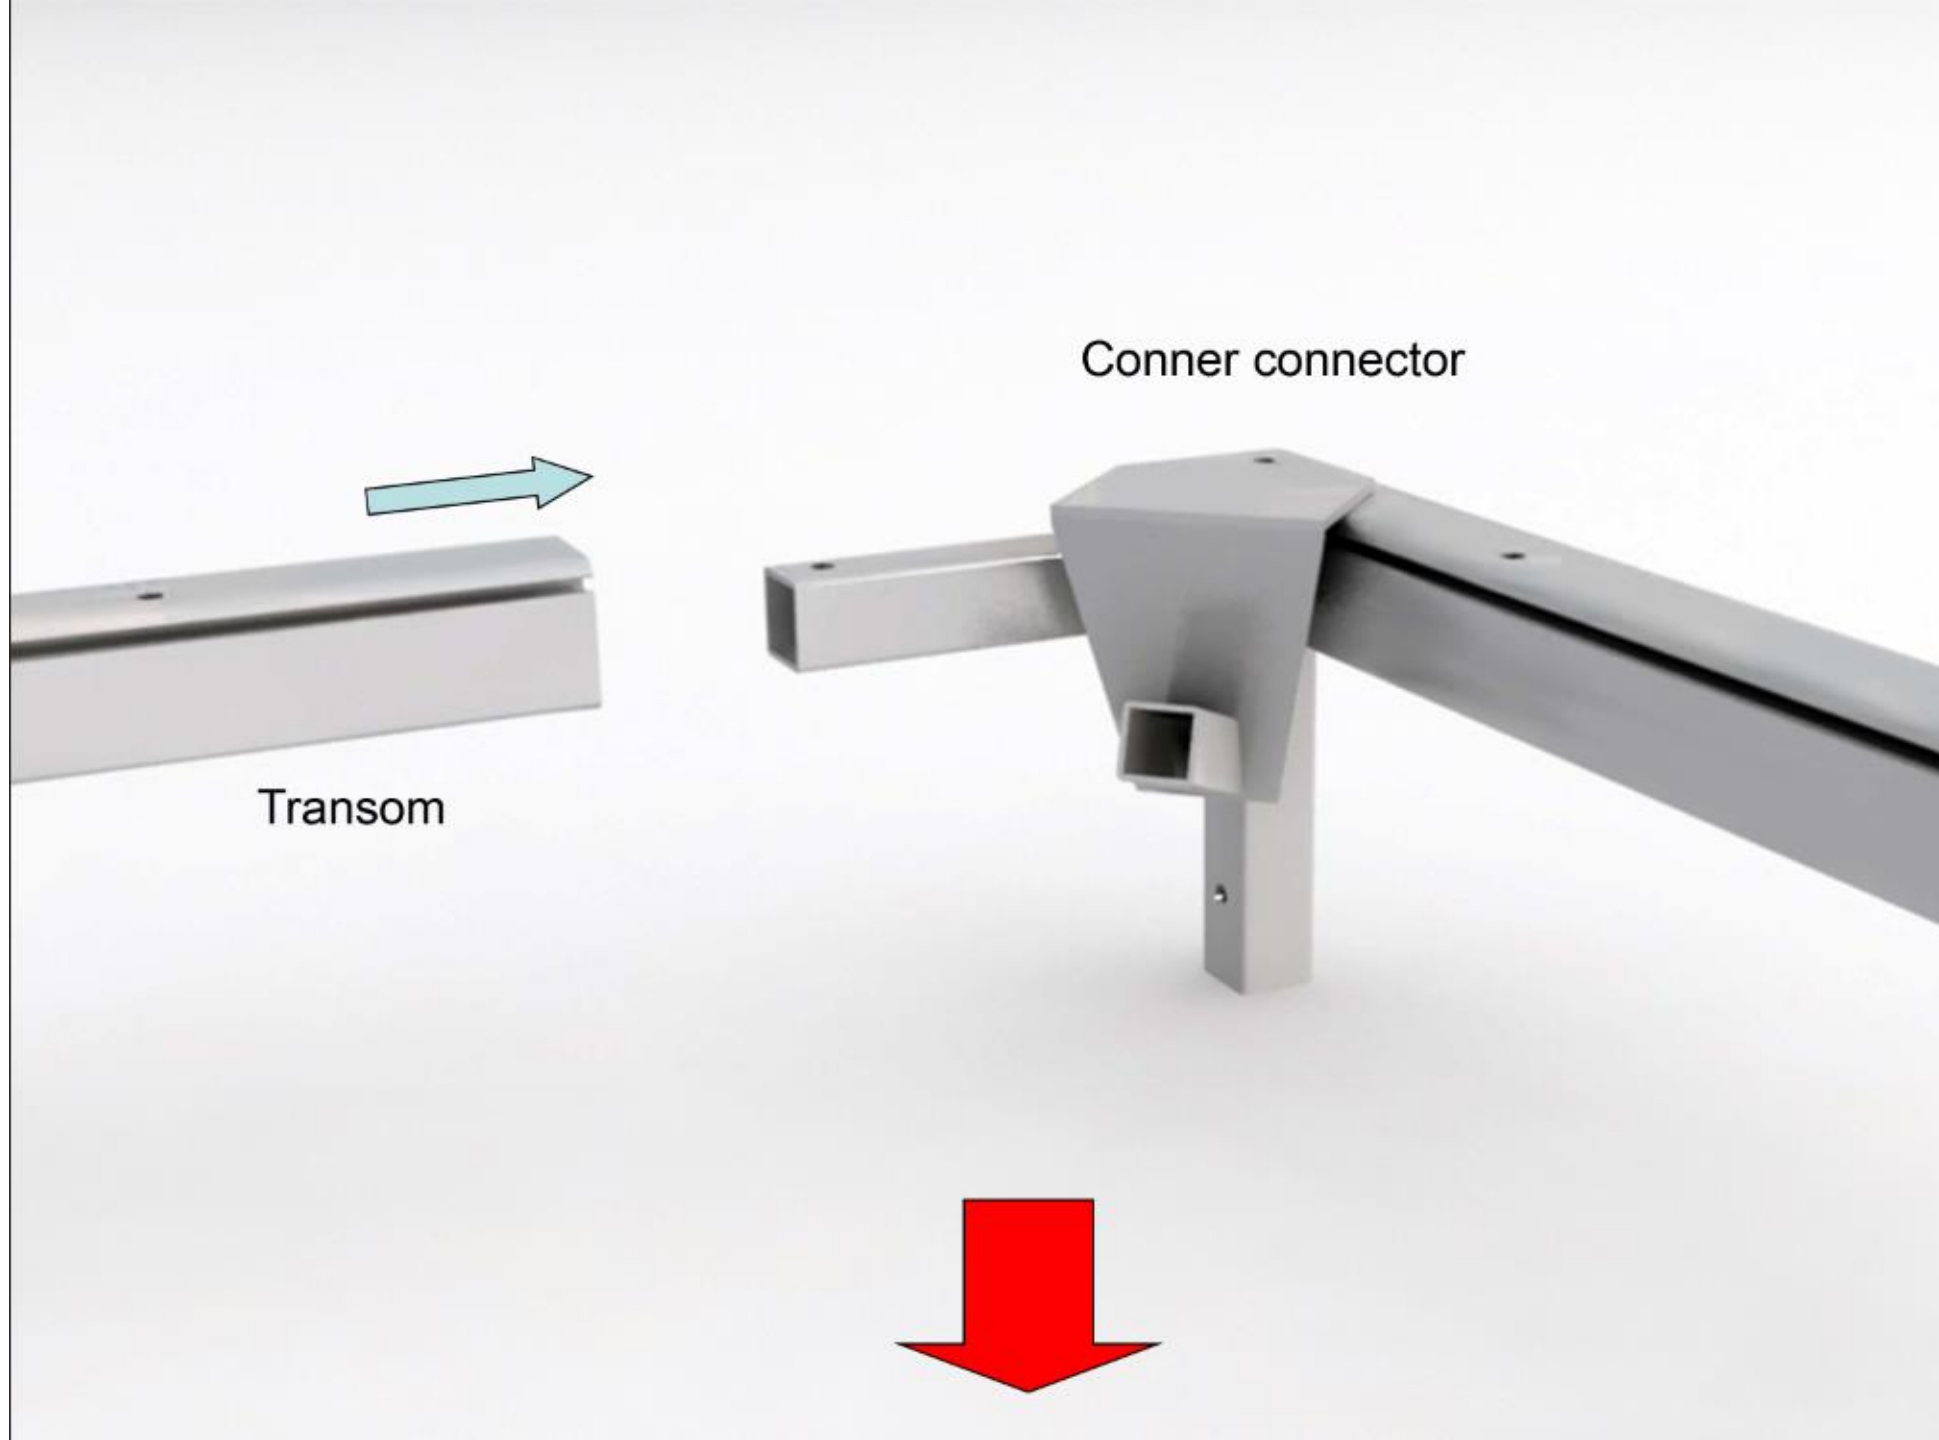

Transom

Corner connector

Conner connector


Transom




Finish




2. Roof purlin, stip

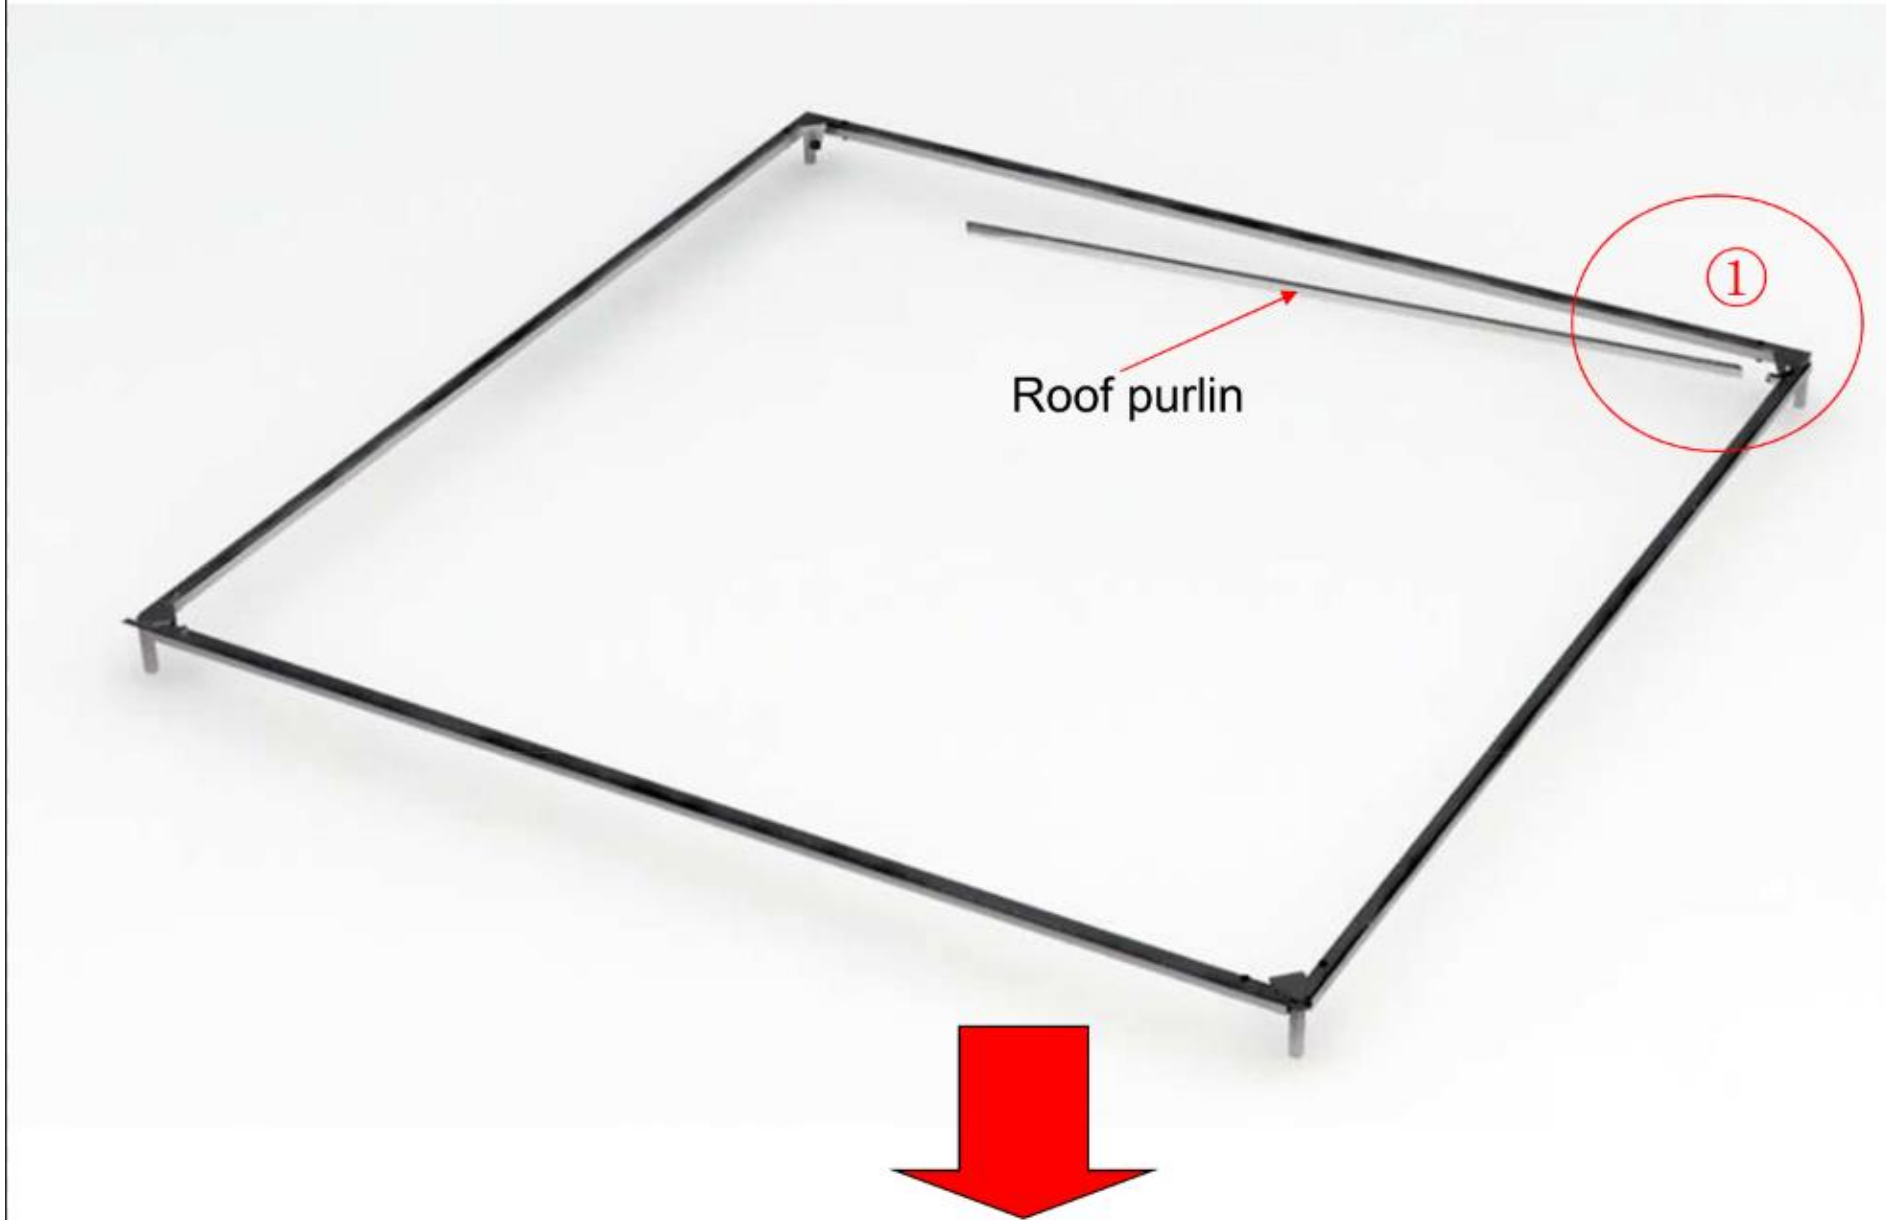

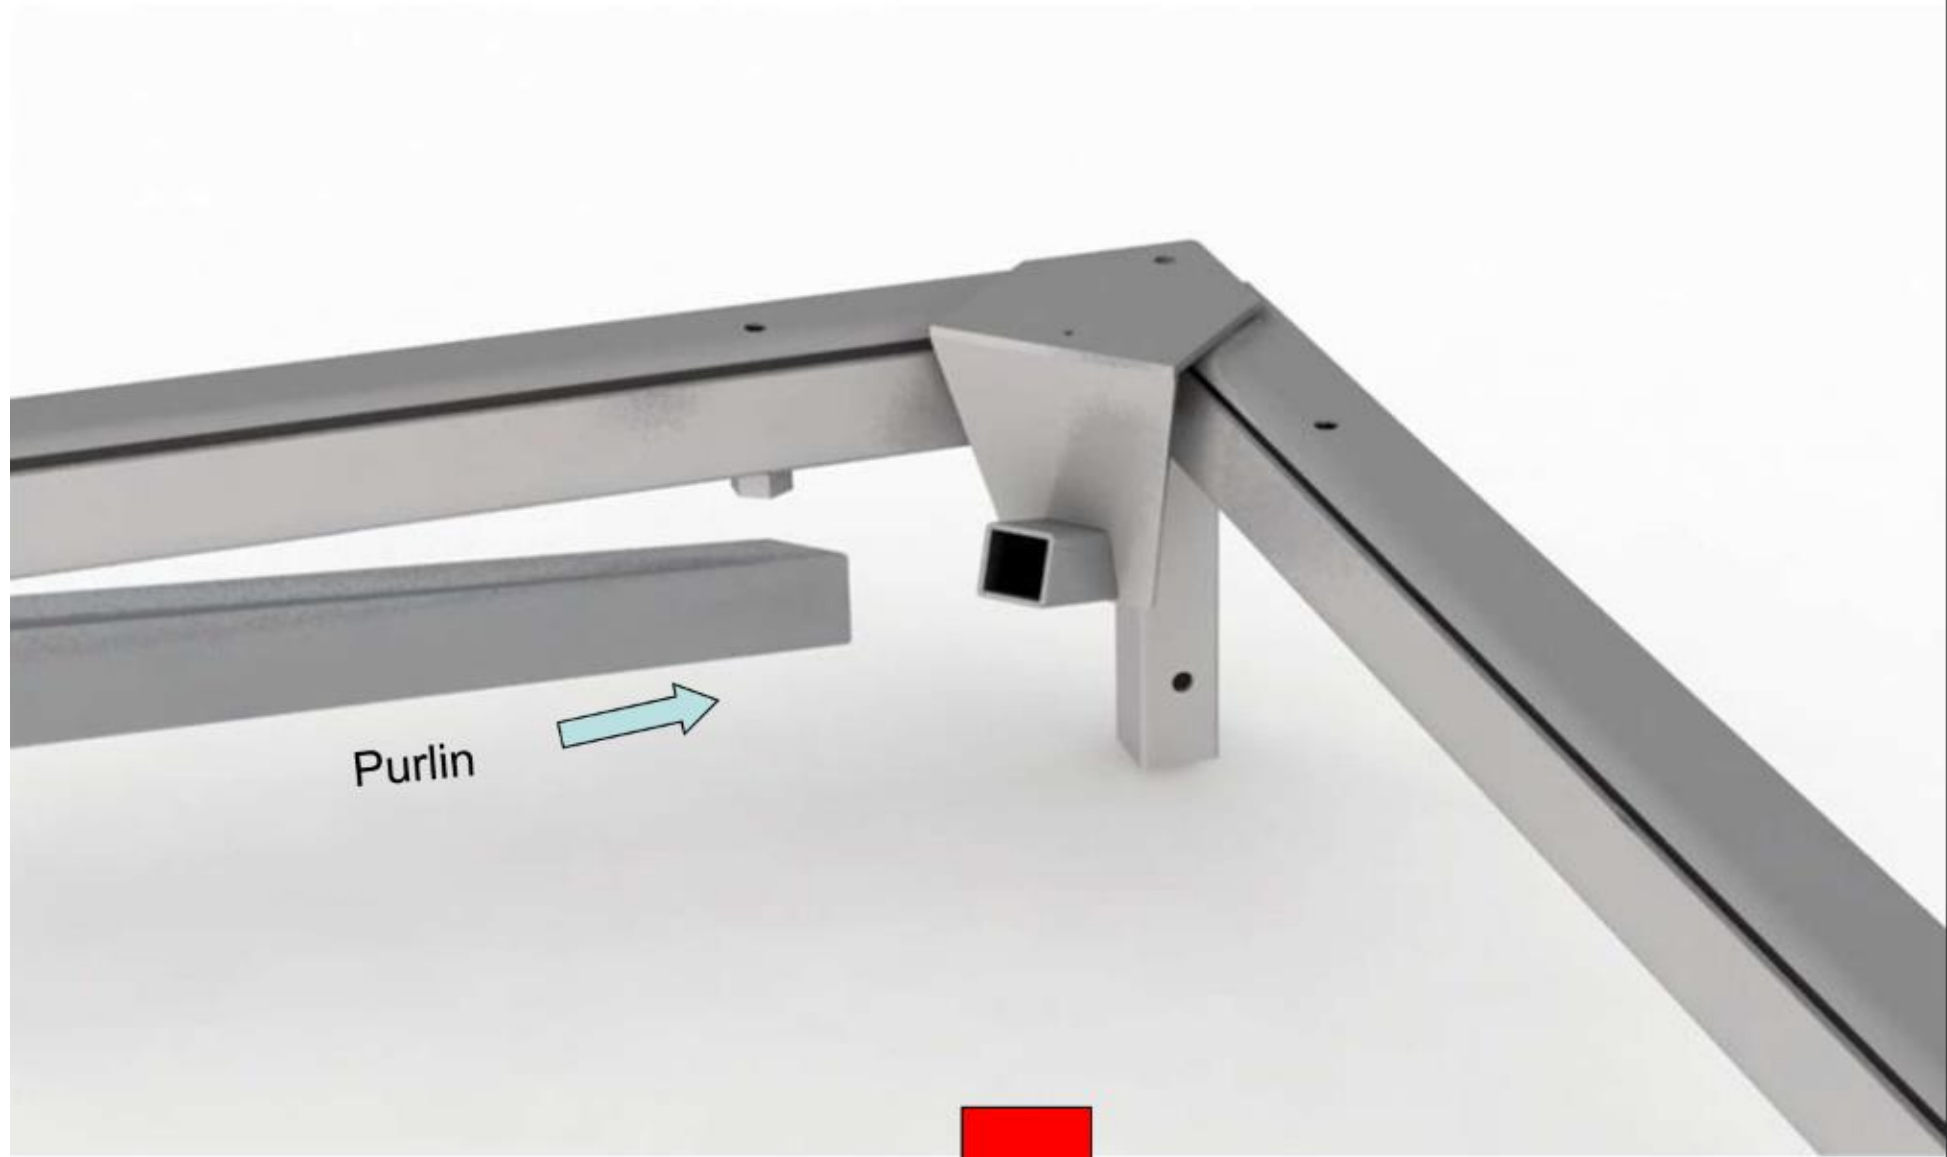

Purlin




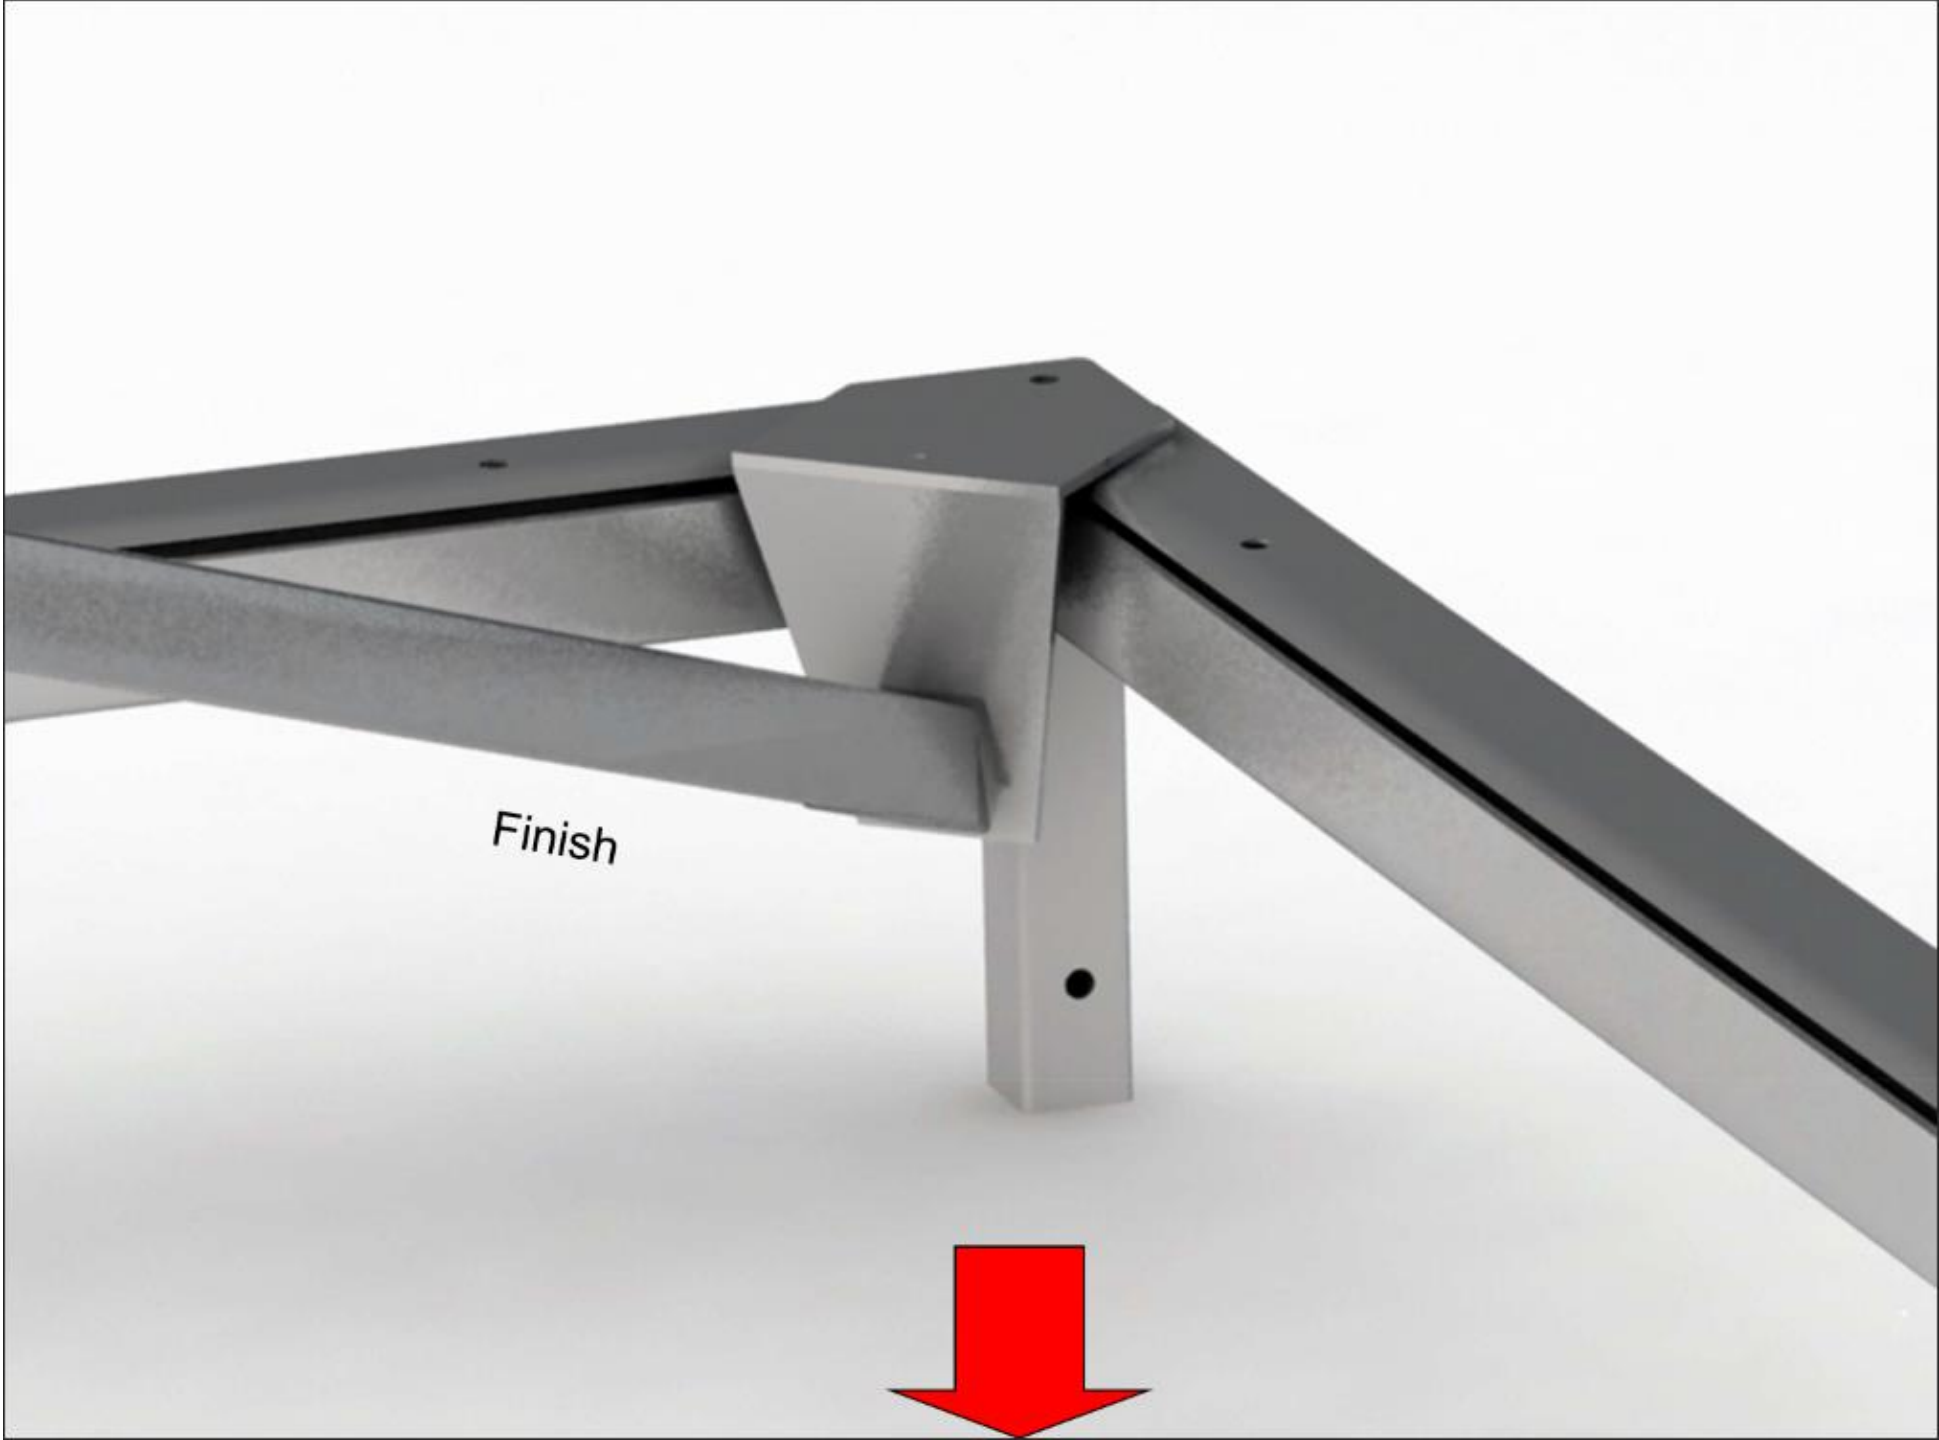

Finish



Install all 4 roof purlins

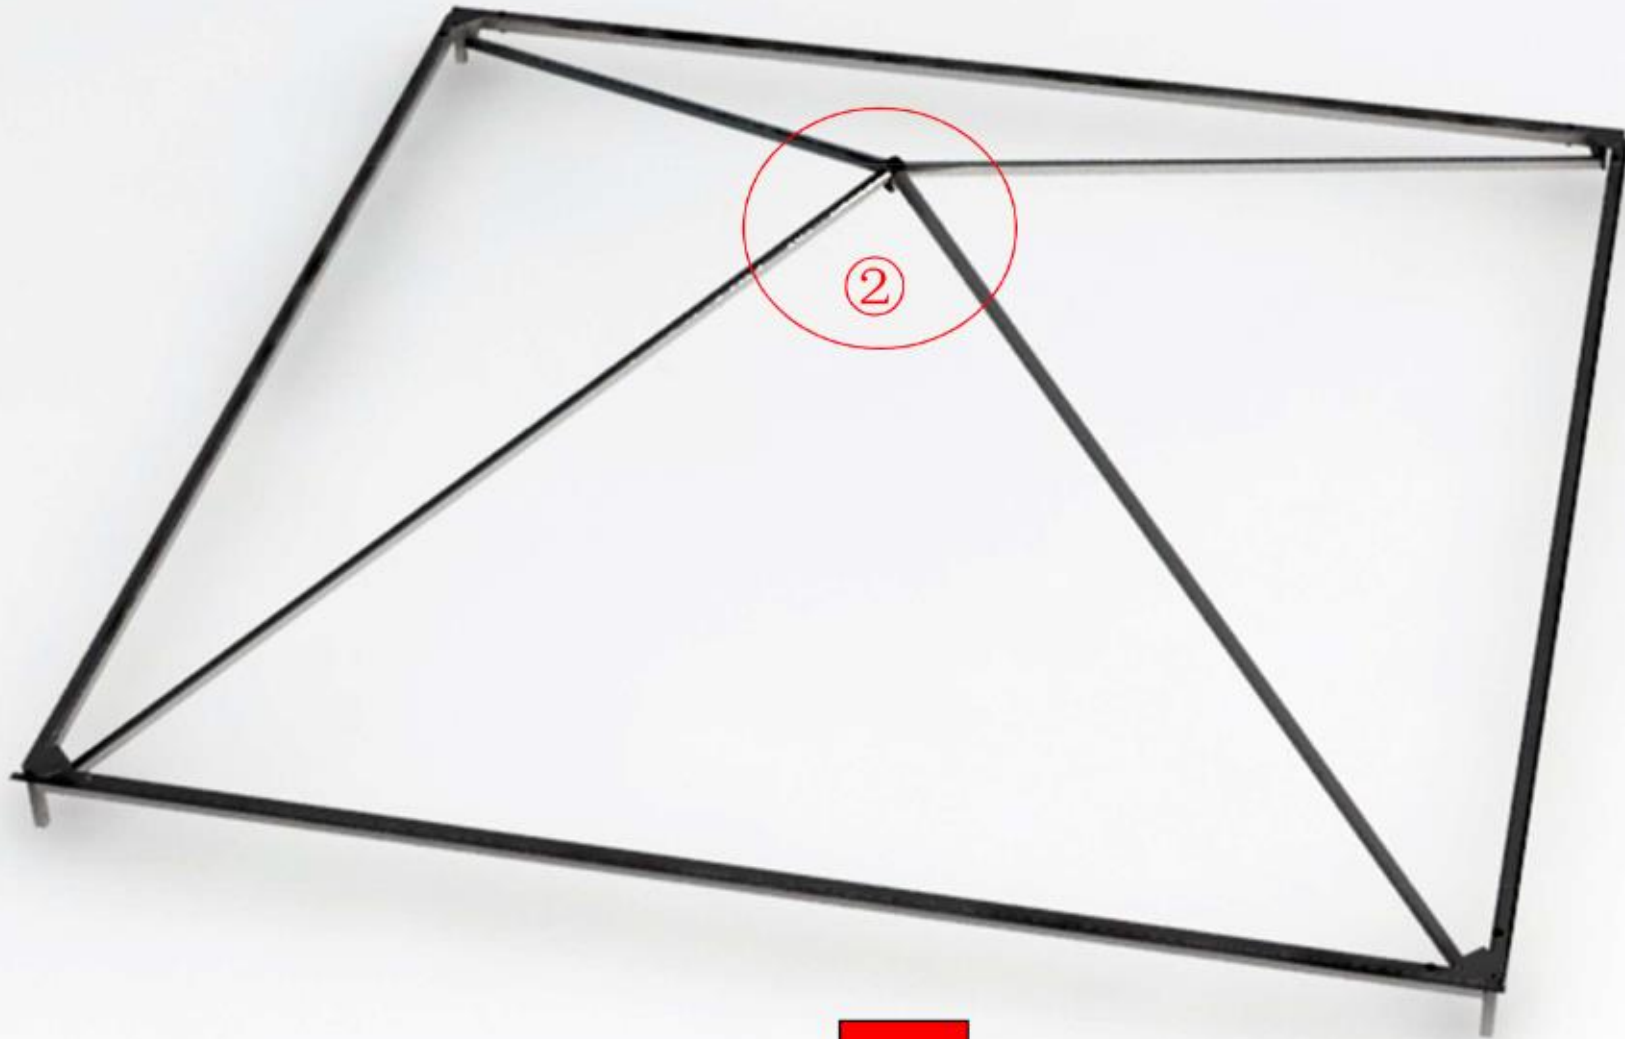


Top connector





Top connector



Purlin

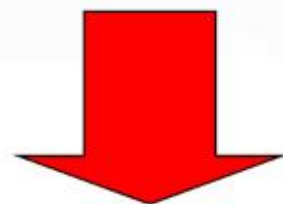


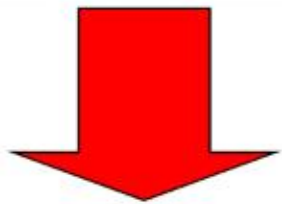


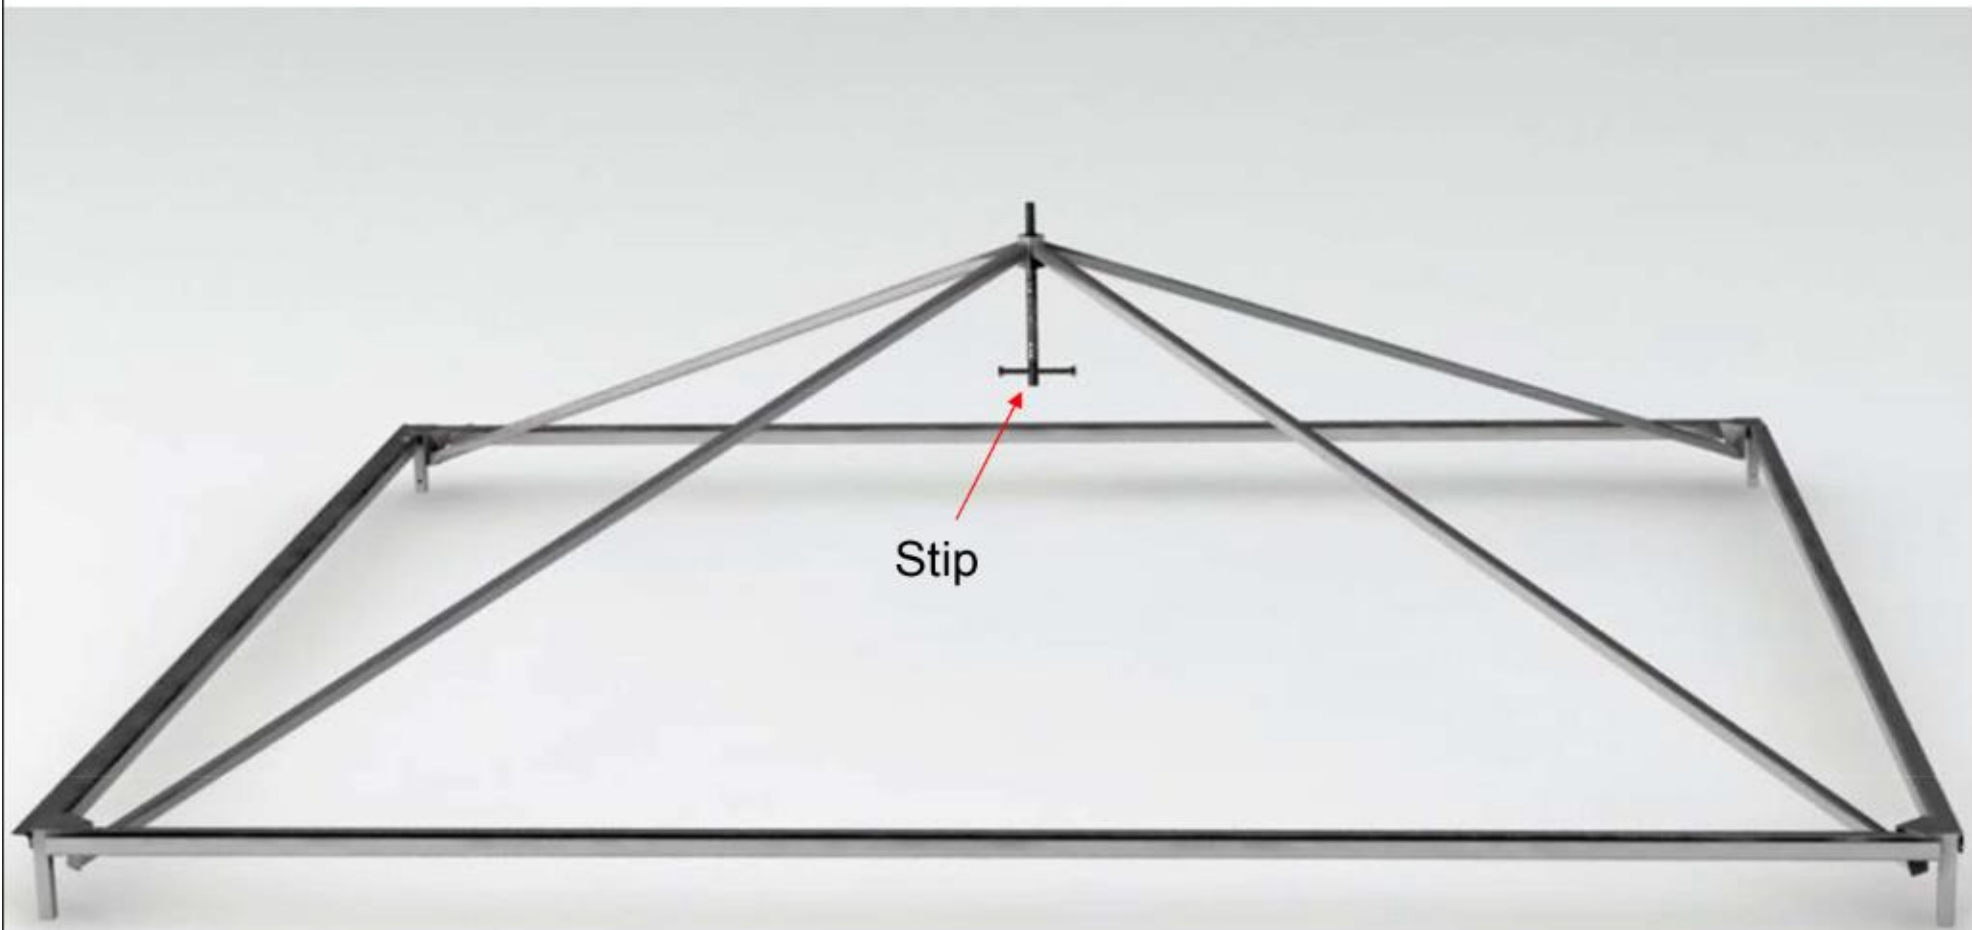


Finish the roof frame





3. Roof cover

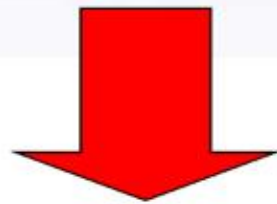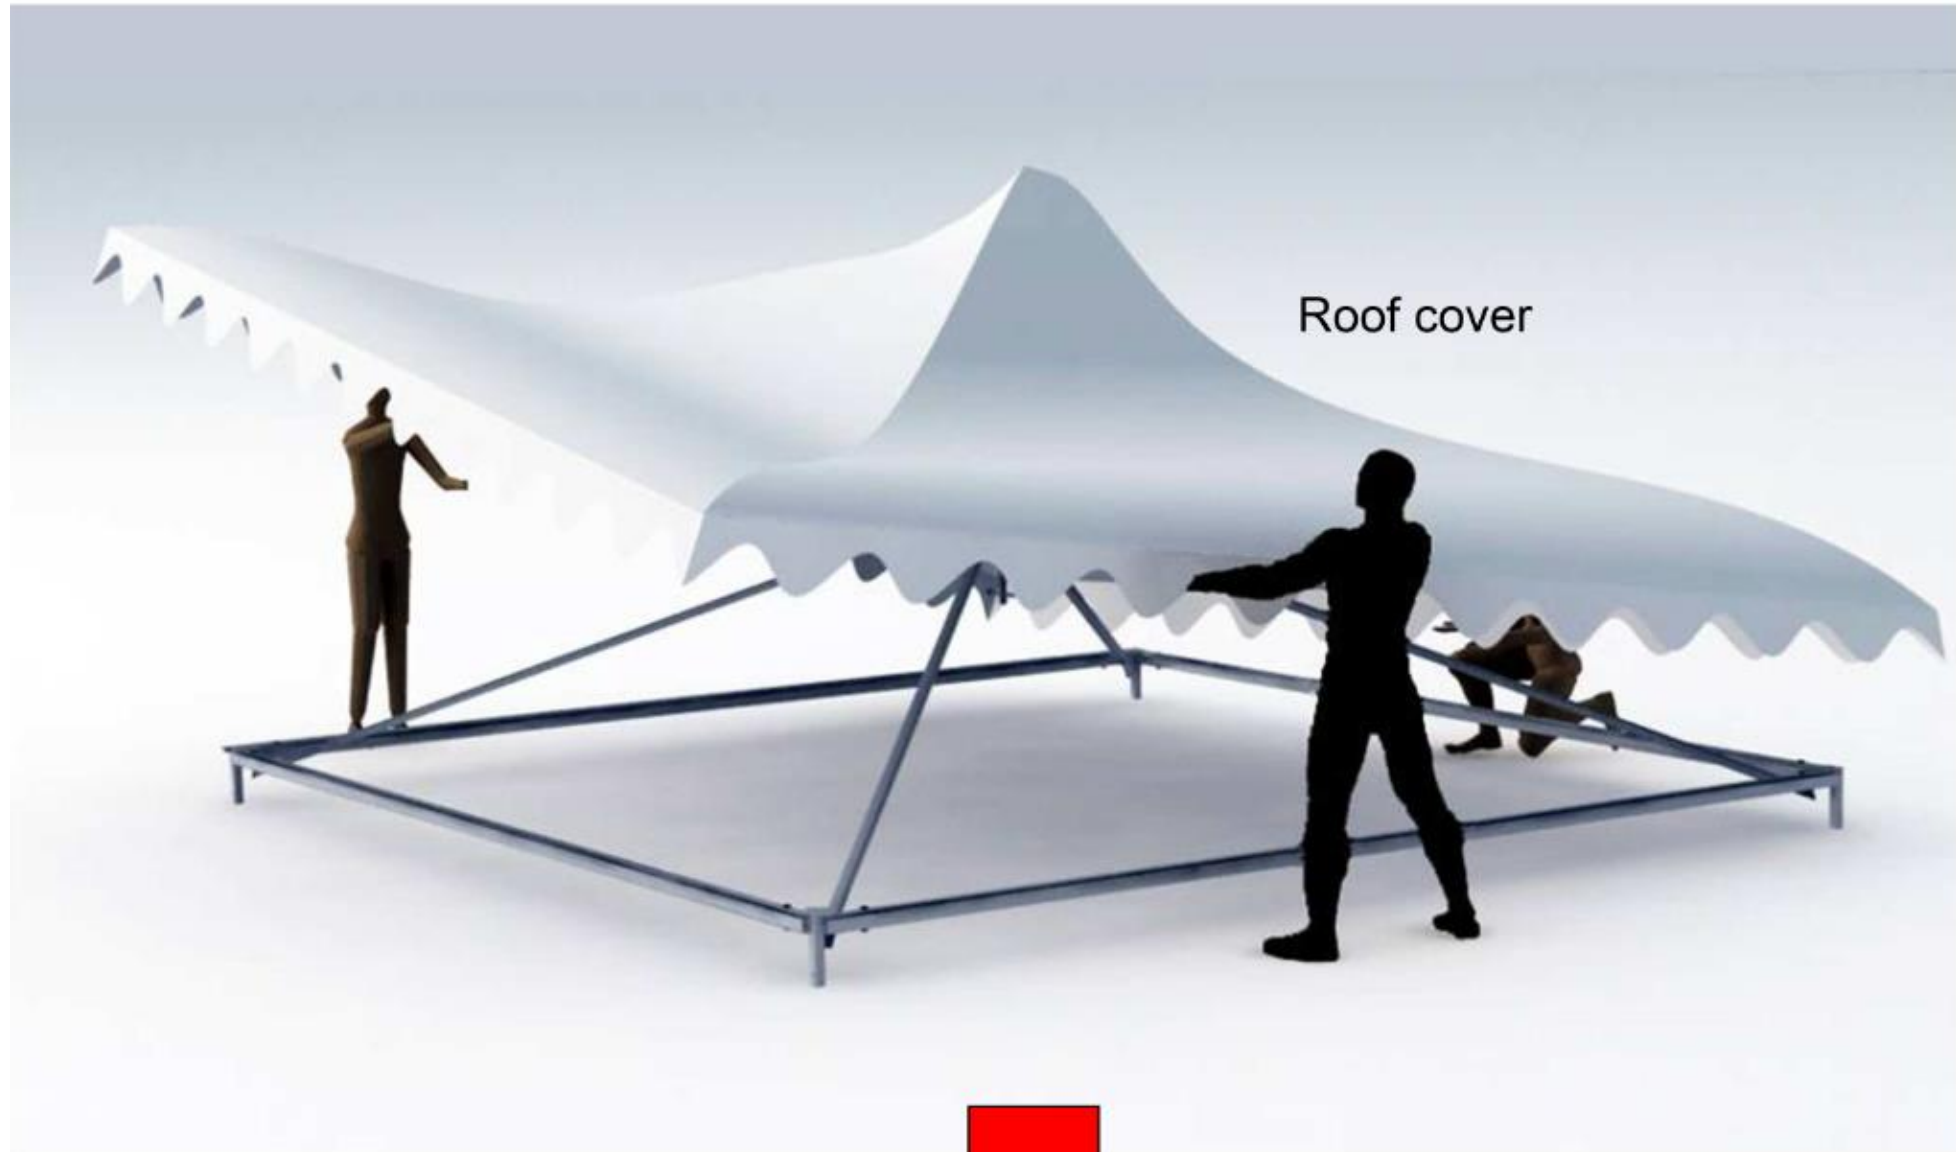

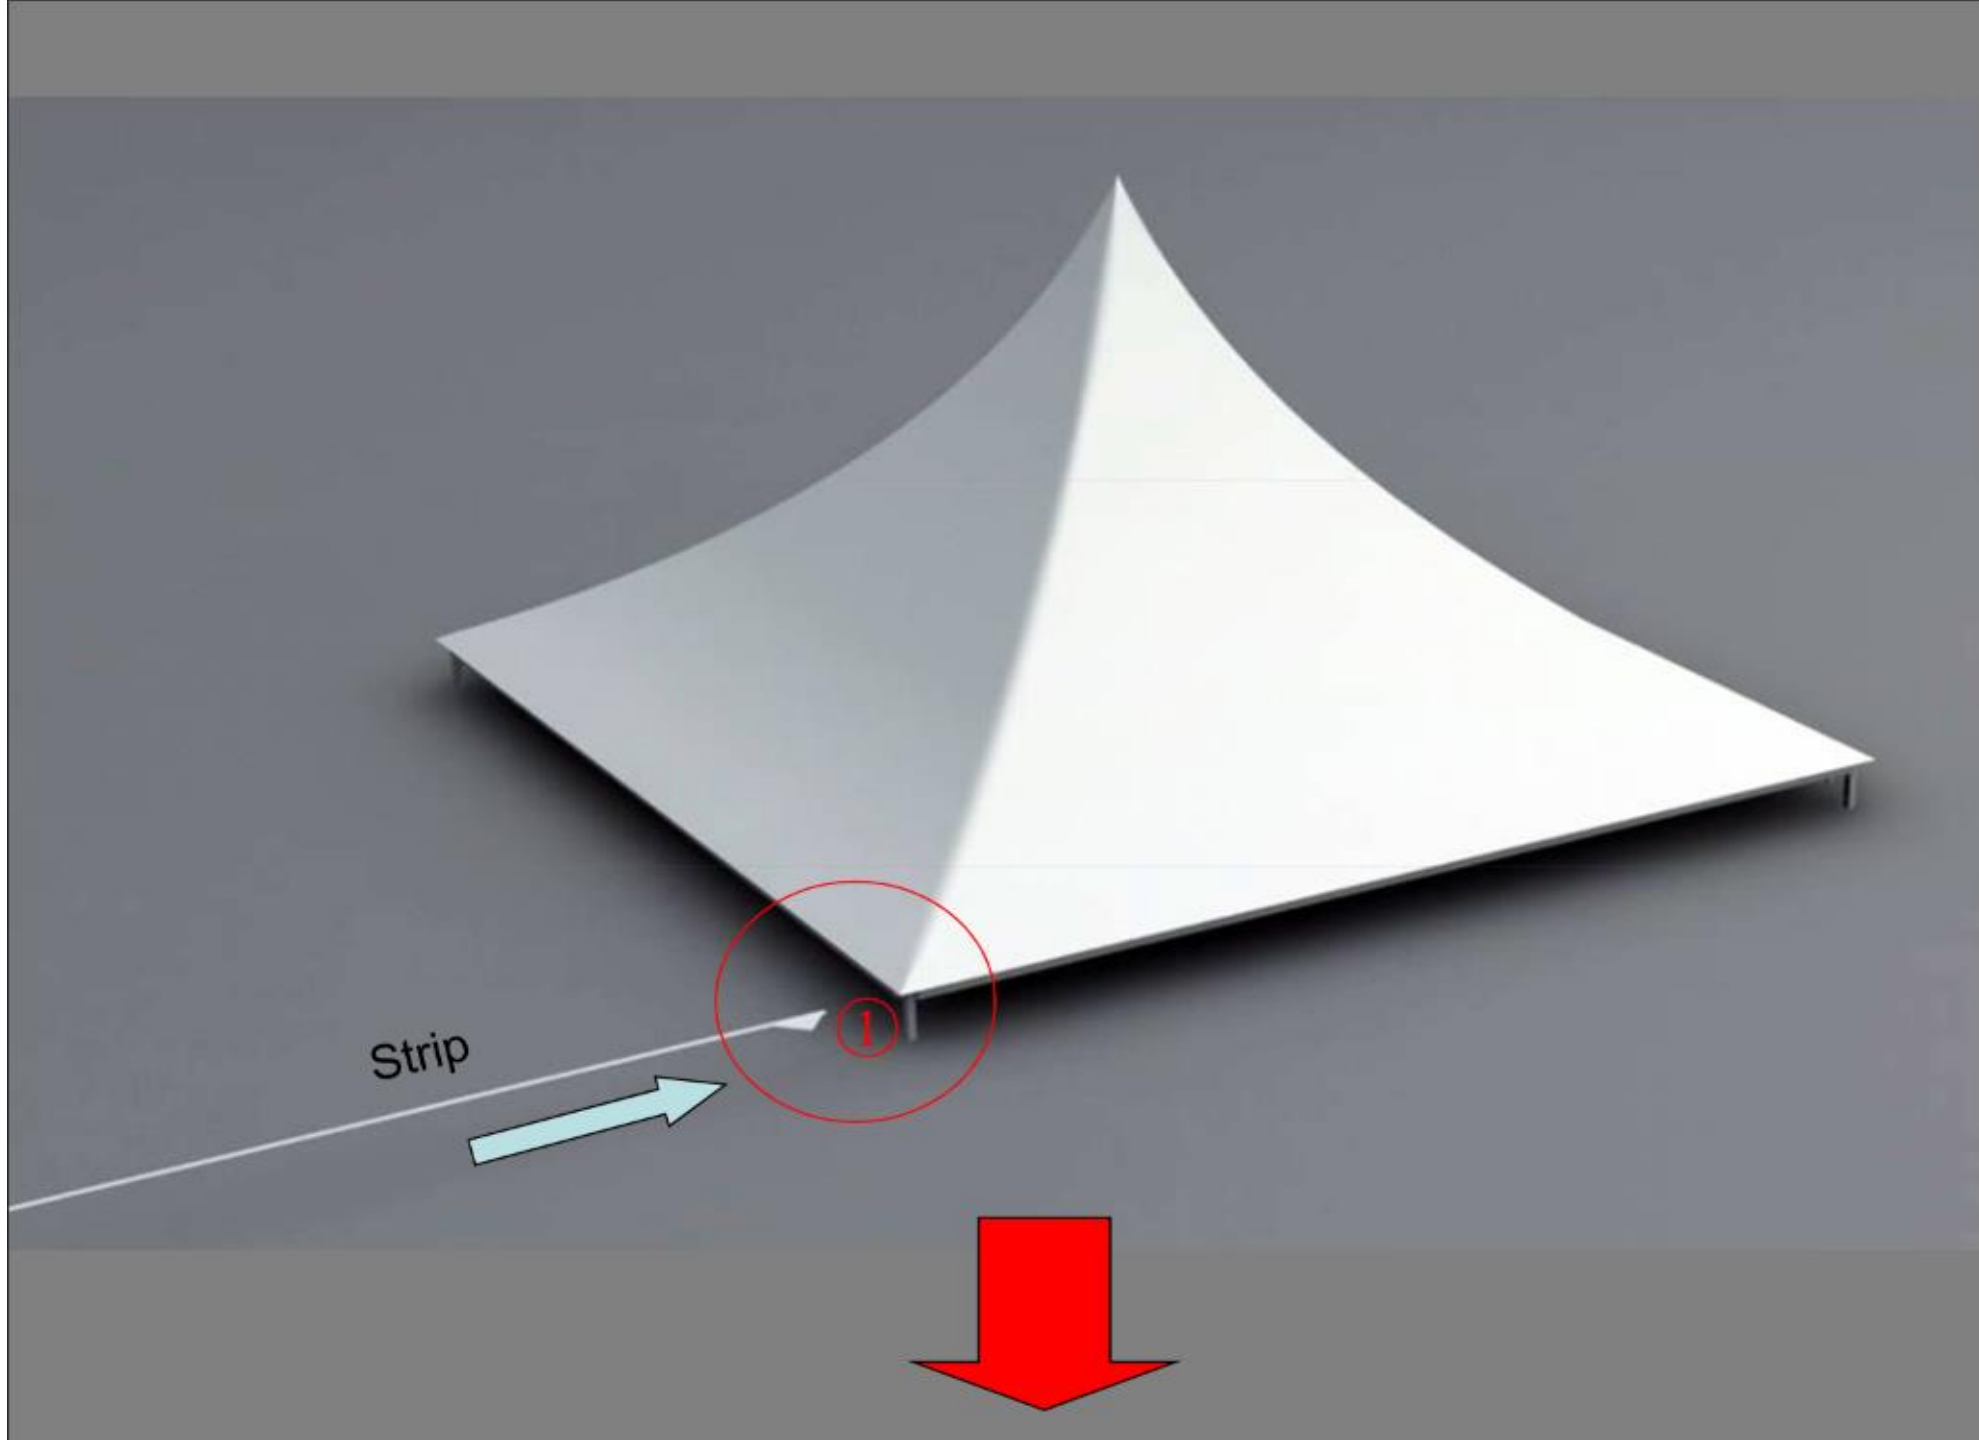

Insert the strip

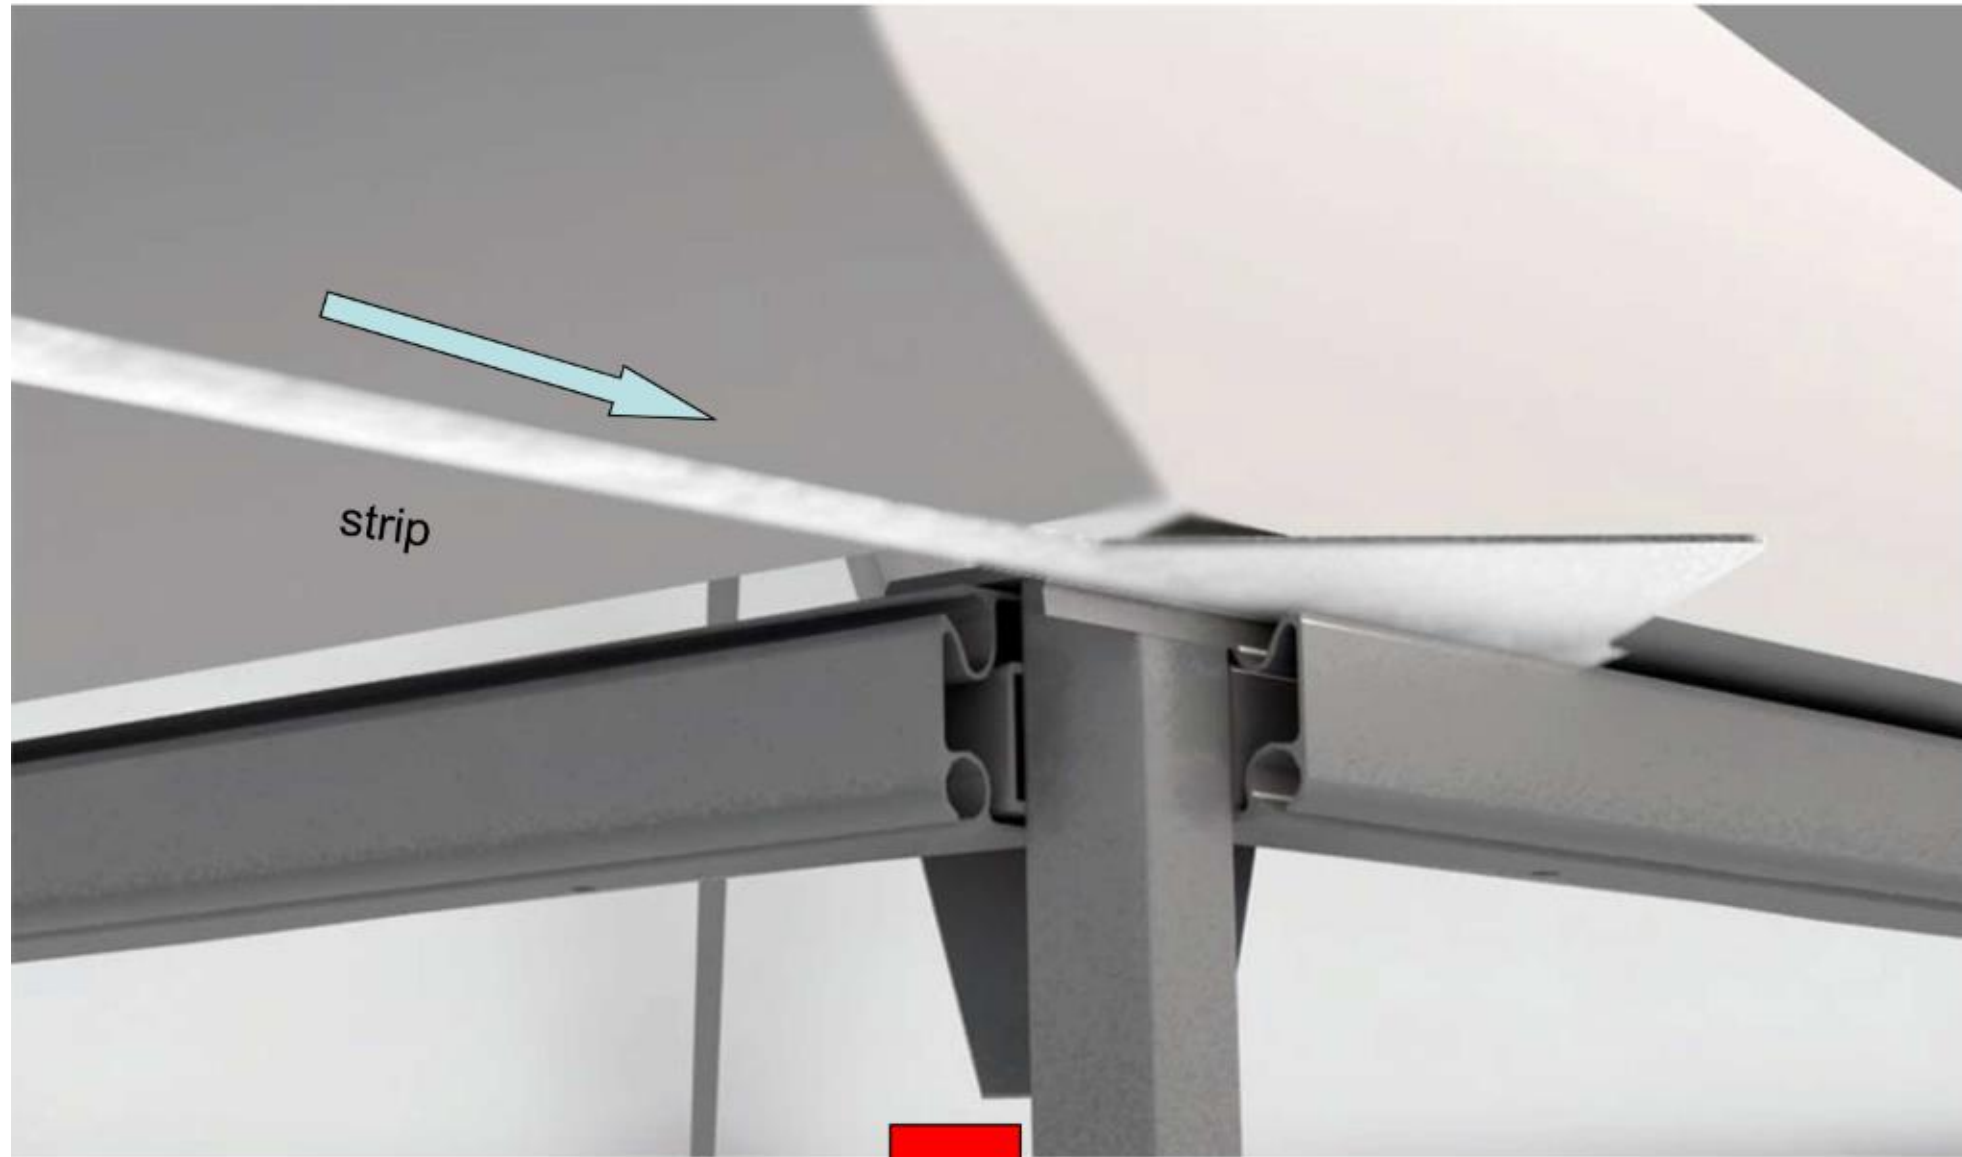

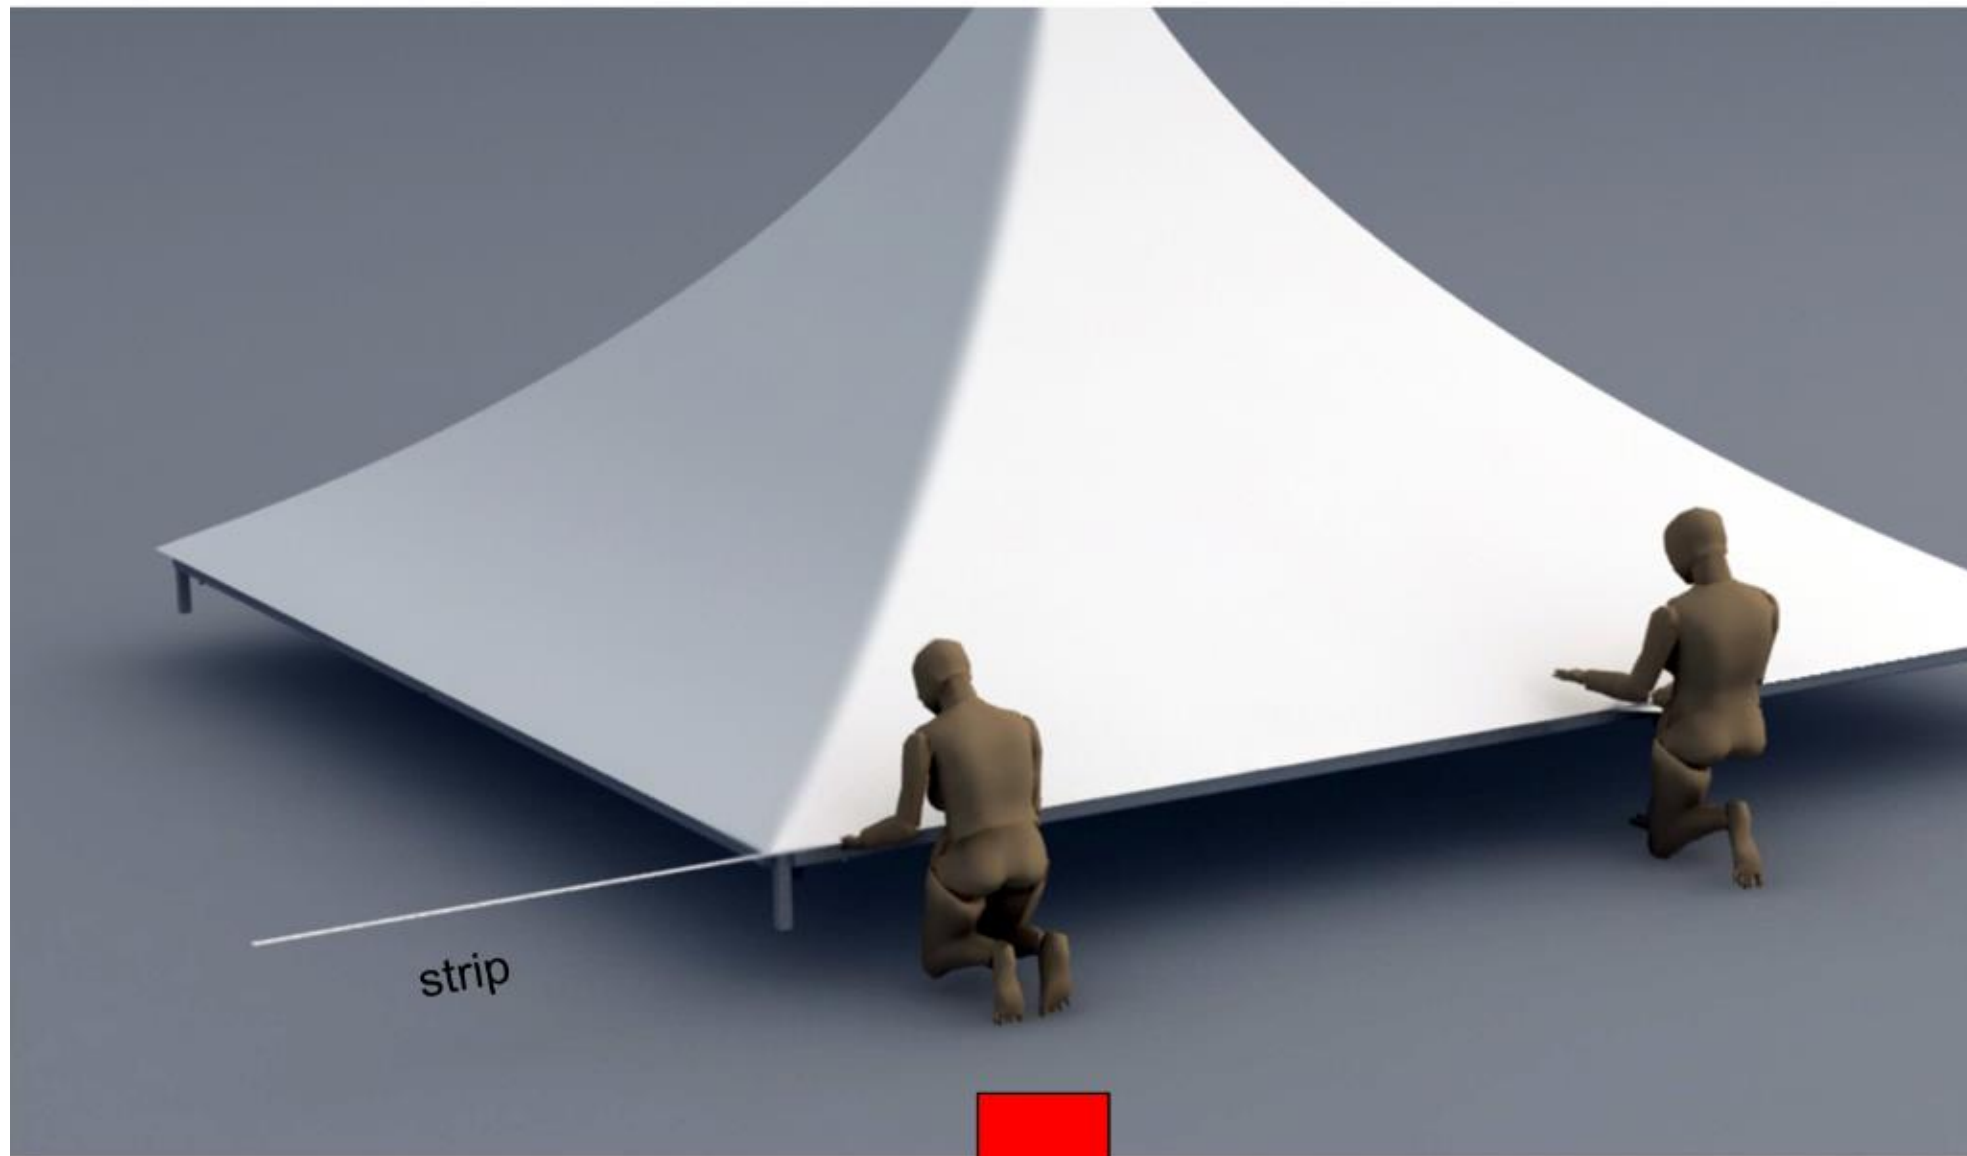



strip





Turn the Crew shaft,
Make the roof tension.

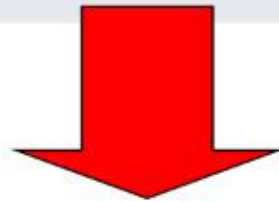

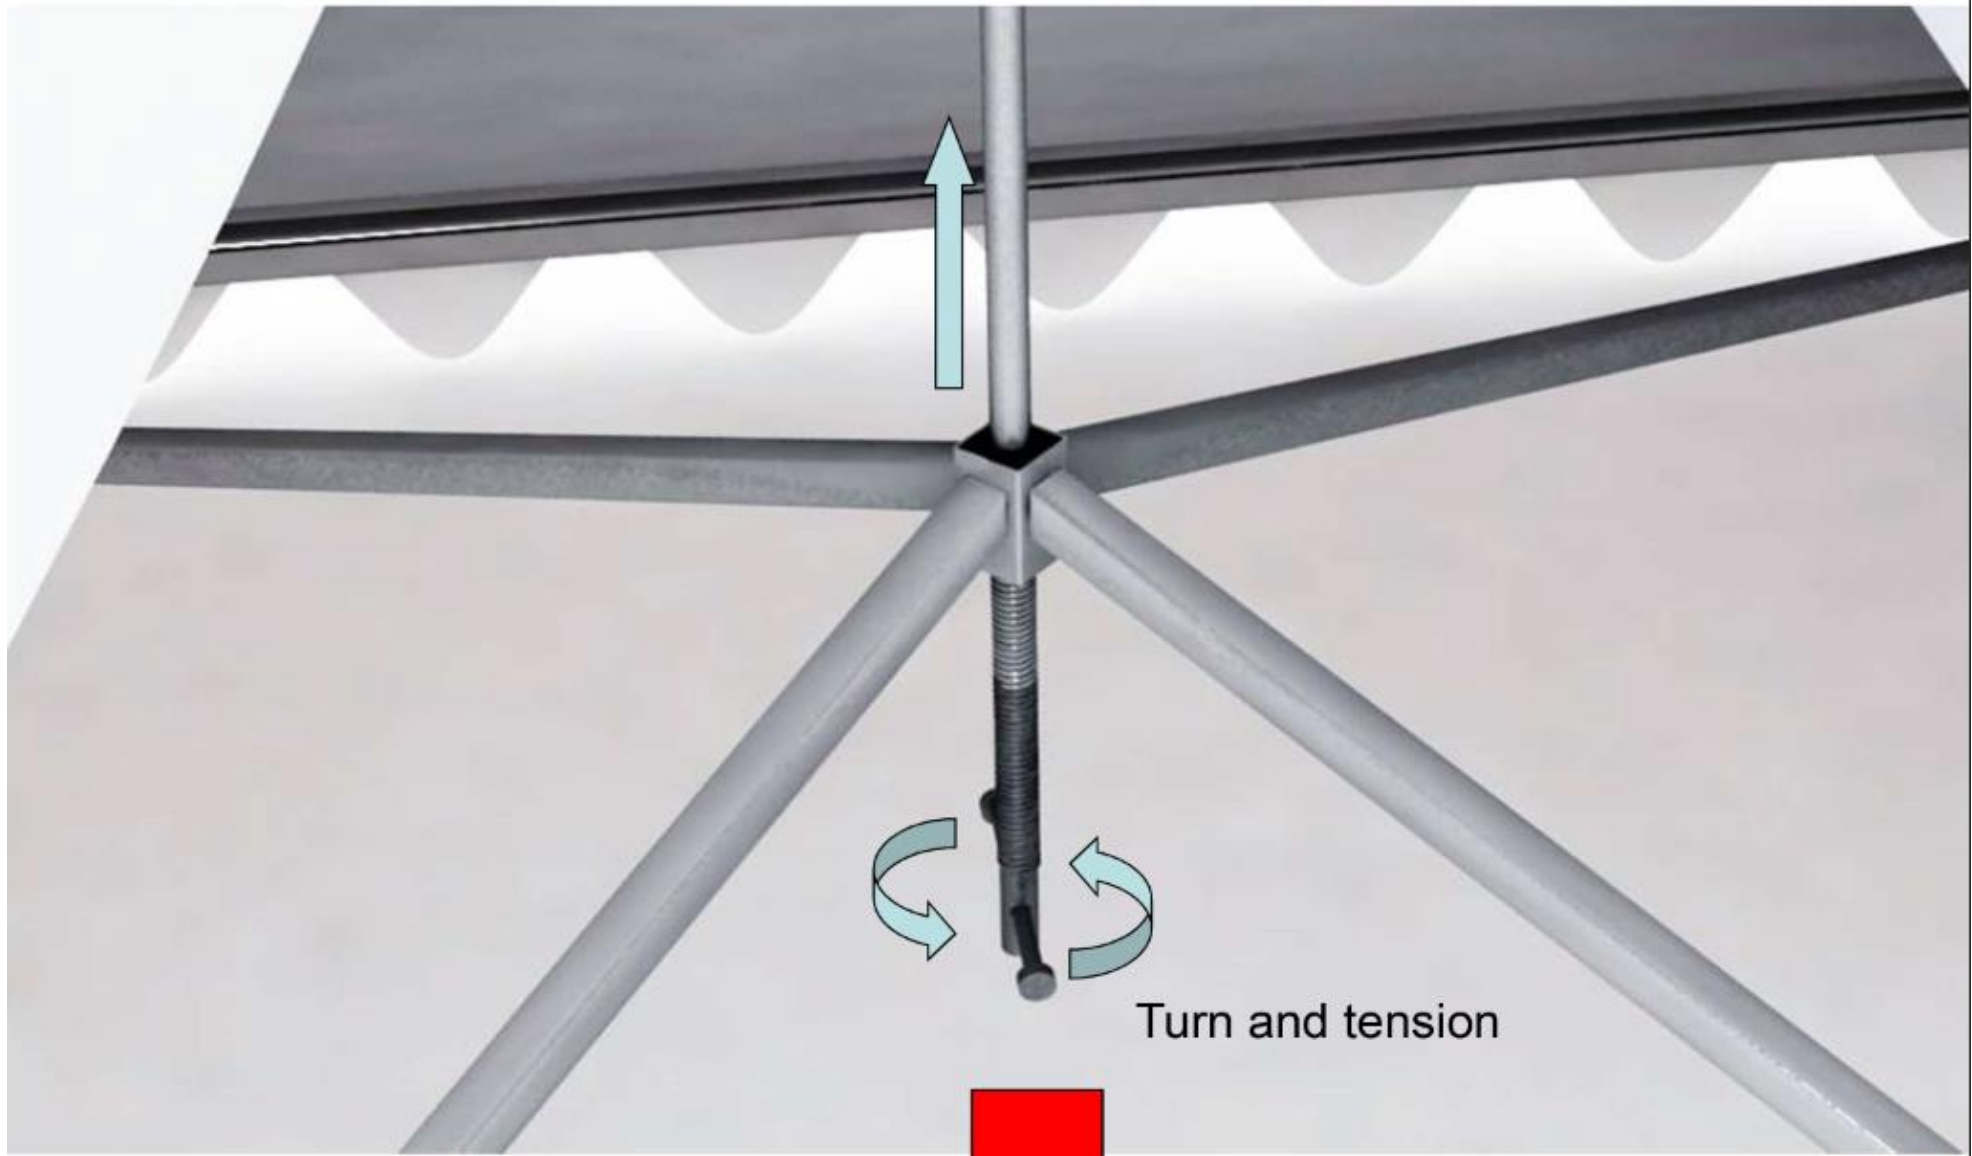


Turn and tension

Finish the roof



4. Upright

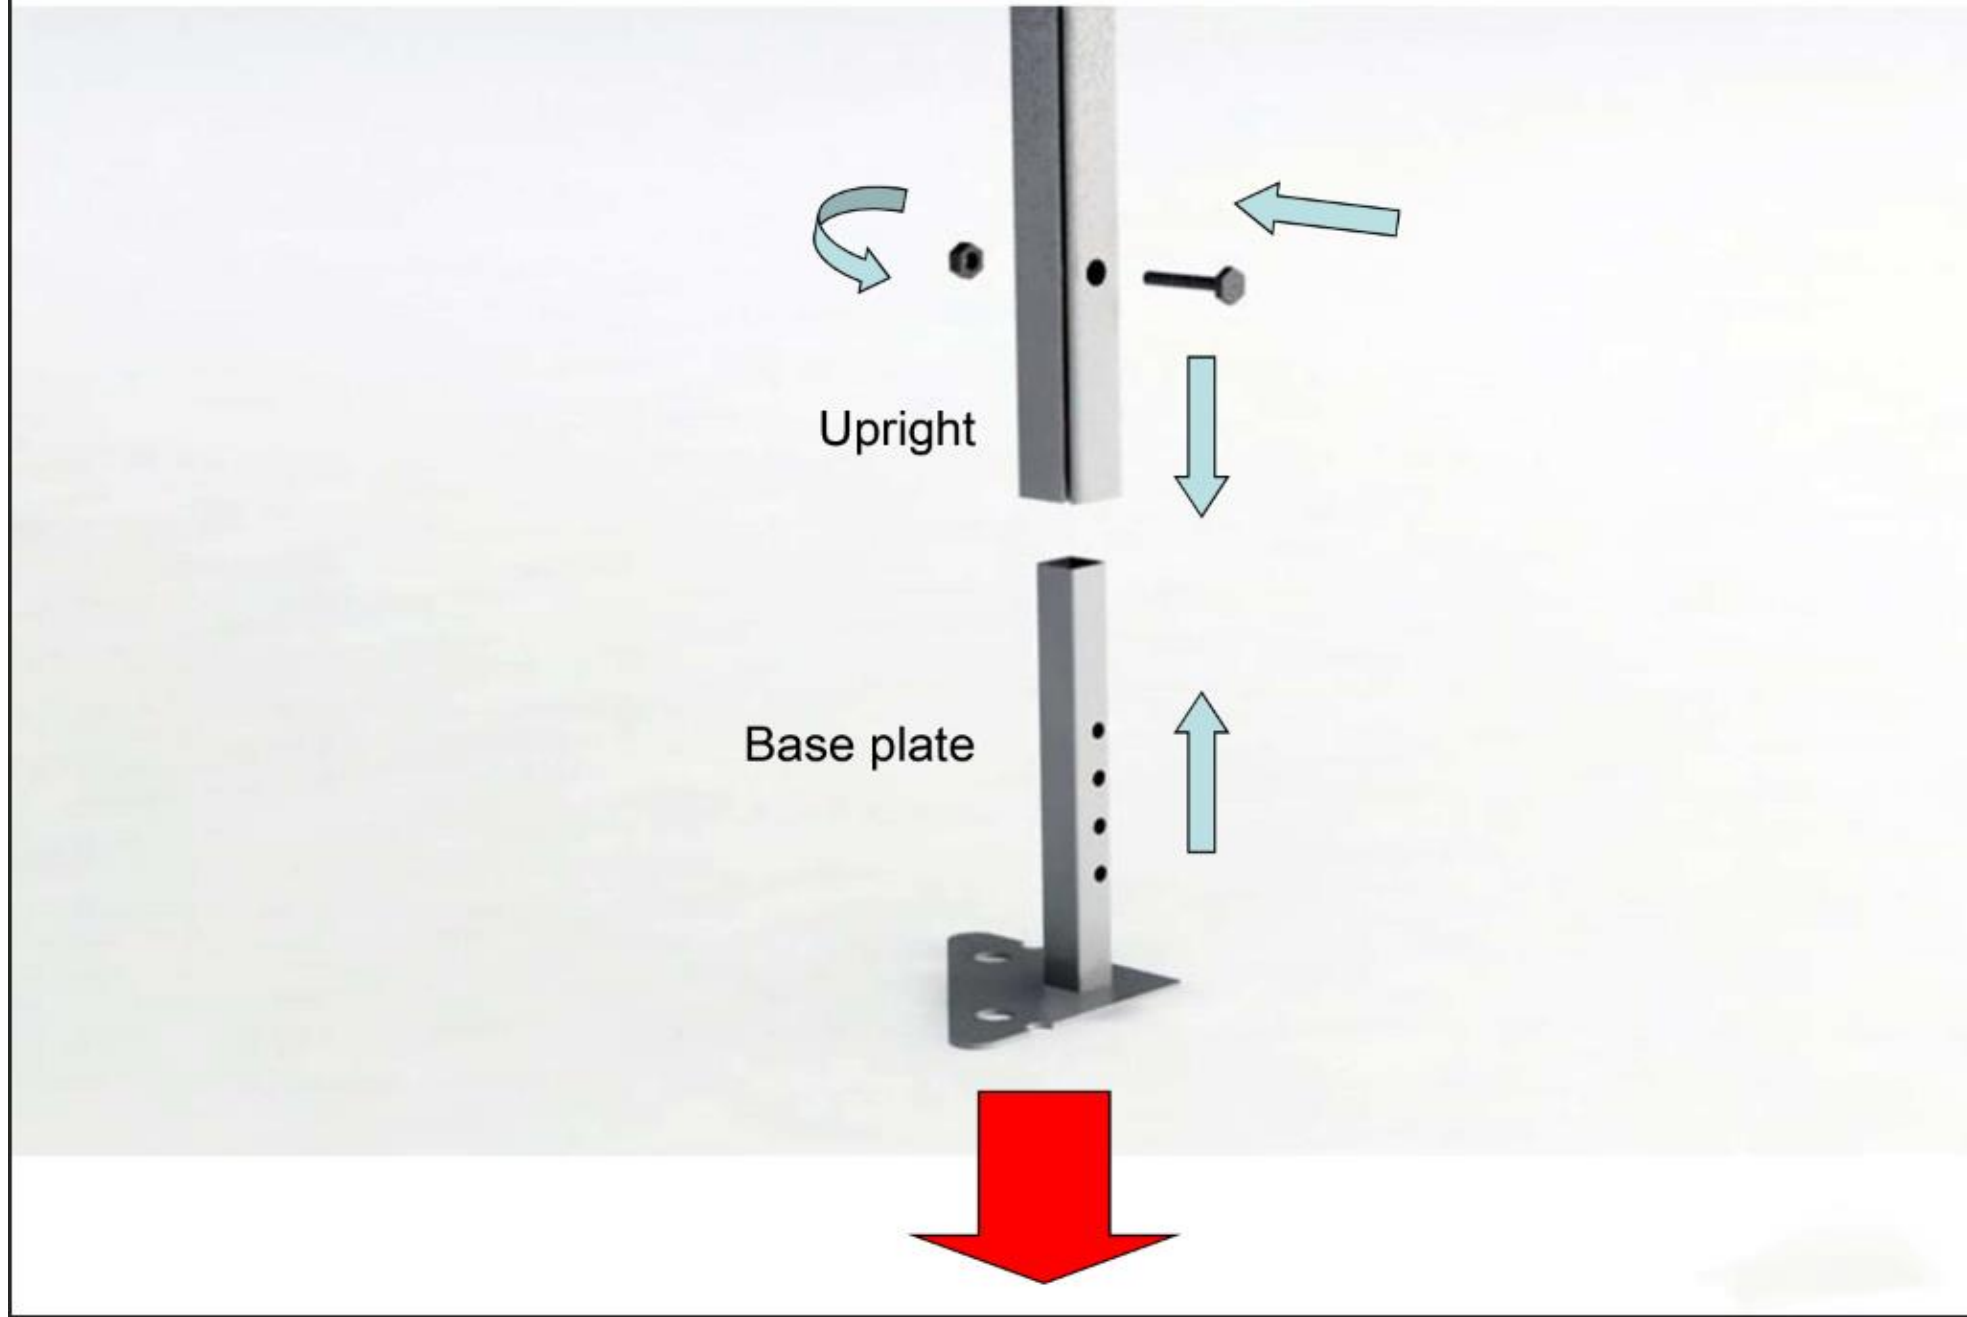



Join the upright into the Conner connector

Conner connector

Upright






Finish standing



5. Side wall cover

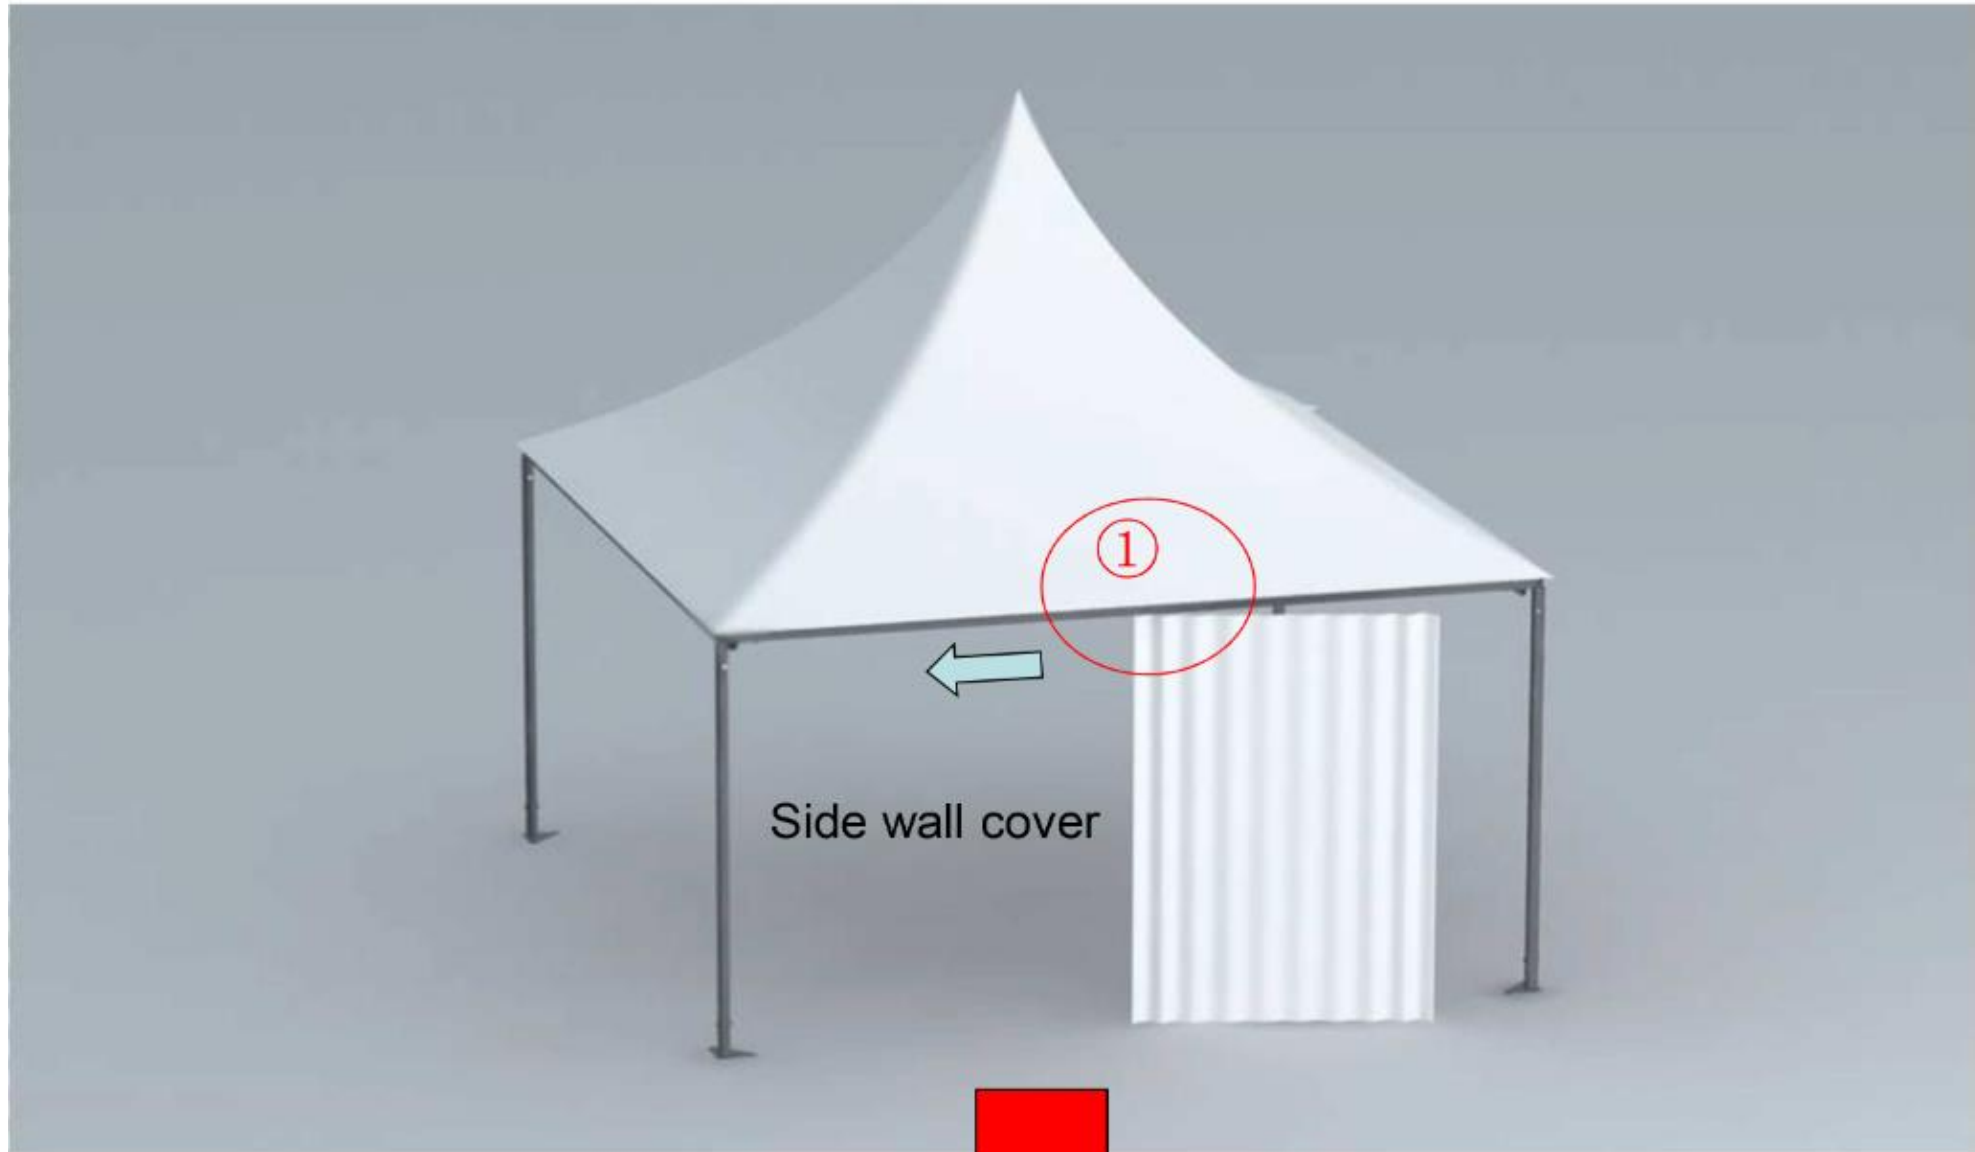


Side wall cover




Put into the groove

Side cover



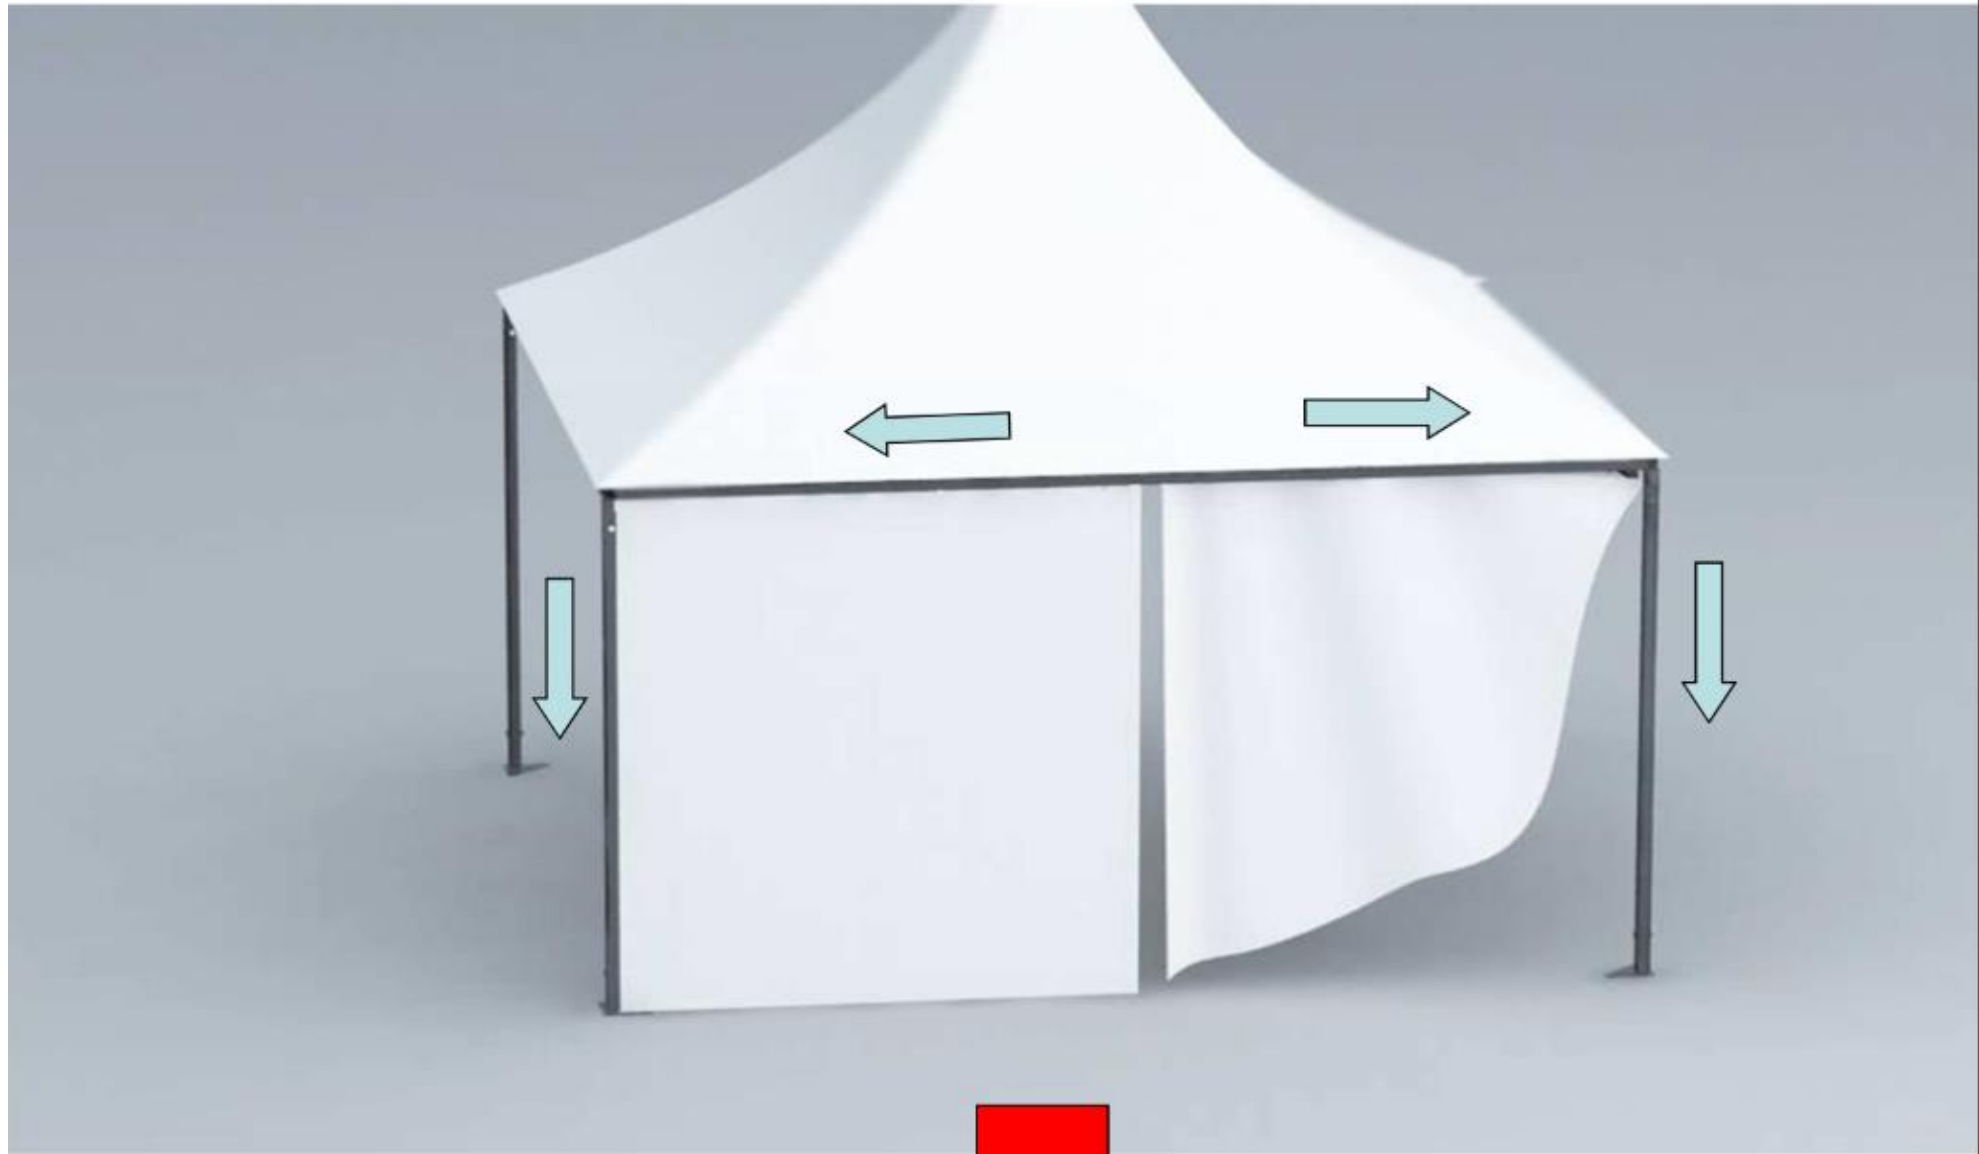

Finish one side

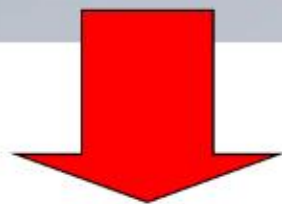

Finish

